

	Time Task Tariff	
JOB NO	CHASSIS JOB DESCRIPTION	Time/Hours*
10001	Main Frame - Straighten (GS) - First 12 in.	0.50
10002	Main Frame - Straighten (GS) - Ea. add'l 12 in.	0.50
10003	Main Frame - Straighten & Weld (GW) - First 12 in.	0.75
10004	Main Frame - Straighten & Weld (GW) - ea. add'l 12 in.	0.75
10005	Main Frame - Weld (WD) - First 12 in.	0.50
10006	Main Frame - Weld (WD) - ea. add'l 12 in.	0.25
10007	Front Bolster - Replace (RP) Full width - 20 ft.	8.00
10008	Front Bolster - Replace (RP) Full width - 40 ft.	8.00
10009	Front Bolster - Insert (IT) - First 6 in.	1.00
10010	Front Bolster - Insert (IT) - ea. add'l 6 in.	0.25
10011	Front Bolster - Section - First 6 in.	1.50
10012	Front Bolster - Section - ea. add'l 6 in.	0.50
10013	Front Bolster Gusset - Replace (RP) - Each	0.75
10014	Container Guide - Replace (RP) - Each	0.50
10015	Nose Box - Minor damages (GS, GW)	0.50
10016	Nose Box - Replace (RP) - One only	1.50
10017	Gooseneck and Transition Assembly - Replace (RP) - Complete	14.00
10018	Gooseneck and Transition Assembly - Straighten (GS) - Complete	6.00
10019	Gooseneck Rail - Replace (RP) Full profile - Each full length	6.00
10020	Gooseneck Rail - Straighten (GS) - Each full length	3.00
10021	Gooseneck Rail - Doubler Plate(re-enforcing) - First 24 in.	2.50
10022	Gooseneck Rail - Doubler Plate(re-enforcing) - each add'l 6 in.	0.50
10023	Main Side Rail - Replace (RP) - 23.5 ft.	20.00
10024	Main Side Rail - Replace (RP) - 40 ft.	26.00
10025	Crossmembers - Straighten (GS) - First one	0.50
10026	Crossmembers - Straighten (GS) - ea. add'l	0.50
10027	Crossmembers - Straighten & Weld (GW) - First 6 ins	0.50
10028	Crossmembers - Straighten & Weld (GW) - ea. add'l 6 ins	0.25
10029	Crossmembers - Replace (RP) - First	1.50
10030	Crossmembers - Replace (RP) - ea. add'l	0.20
10031	Crossmembers - Weld (WD) - First 6 in.	0.25
10032	Crossmembers - Weld (WD) - ea. add'l 6 in.	0.15
10033	Main Frame Crossmember Gusset - Replace (RP) - Each	0.50
10034	Main Frame Air Hose Retaining Clip - Replace (RP)	0.25
10035	Air Tank Mounting Bracket - Replace (RP) - Each	0.50
10036	Air Tank Mounting Bracket - Straighten & Weld (GW) - Each	0.50
10037	Rear Deck Plate - Weld (WD) - First 6 in.	0.50
10038	Rear Deck Plate - Weld (WD) - ea. add'l 6 in.	0.25
10039	Rear Deck Plate - Replace (RP) - One only	2.00
10040	Slider Stop Blocks - Remove & Refit (RR) - Each	0.50
10041	Slider Stop Blocks - Replace (RP) - Each	0.50

10042	Slider Guide Plate - Weld (WD) - One side / Both	0.75
10043	Slider Guide Plate - Replace (RP) - Each	1.50
10044	Slider Locking Bar Bracket - Replace (RP) - Each (Max 2)	0.75
10045	Slider Handle Safety Lock Bracket - Straighten (GS) - Each (Max 1)	0.25
10046	Slider Handle Safety Lock Bracket - Replace (RP) - Each (Max 2)	0.50
10047	Mudflap Mounting Bracket - Straighten & Weld (GW) - Each (Max 2)	0.25
10048	Mudflap Mounting Bracket - Replace (RP)	1.00
10049	Mudflap Mounting Bracket - Straighten (GS) - Each (Max 2)	0.25
10050	Mud Flap - Replace (RP) - Each (Max 2)	0.25
10051	Mud Flap - Resecure (RE) - Each (Max 2)	0.25
10052	Rear Bolster - Replace (RP) - Full width	10.00
10053	Rear Bolster - Insert (IT) - First 6 in.	1.00
10054	Rear Bolster - Insert (IT) - ea. add'l 6 in.	0.25
10055	Rear Bolster - Section (SN) - First 6 in.	1.50
10056	Rear Bolster - Section (SN) - ea. add'l 6 in.	0.50
10057	Rear Bolster Gusset - Triangular - Replace (RP)	1.25
10058	Tail Light (Housing) - Replace (RP) - Each (Max 2)	2.00
10059	Tail Light (Housing) - Straighten (GS) - Each (Max 2)	0.25
10060	Tail Light (Housing) - Straighten & Weld (GW) - Each (Max 2)	0.50
10061	Docking Bumpers - Resecure (RE) - Each (Max 2)	0.25
10062	Docking Bumpers - Replace (RP) - Each (Max 2)	0.50
10064	Pintle Hook (Hitch) Assembly - Replace (RP) - One only	3.00
10065	Pintle Hook (Hitch) Assembly - Resecure (RE) - One only	0.50
10066	Pintle Hook (Hitch) Assembly - Weld (WD) - One only	0.50
10067	Pintle Hook Support Plate Only - Replace (RP) - One only	1.50
10068	Pintle Hook & Catch Only - Replace (RP) - One set only	2.00
10069	Pintle Hook Catch Only - Replace (RP) - One only	0.50
10070	Pintle Hook Glad Hand - Resecure (RE) - Each	0.25
10071	Pintle Hook Glad Hand - Replace (RP) - Each	0.25
10072	Pintle Hook Glad Hand - Replace (RP) seal - Two only	0.25
10073	Pintle Hook Glad Hand Dummy Coupler - Replace (RP) - Per pair	0.25
10074	Pintle Hook 7 Way Receptacle - Replace (RP) - One only	0.75
10075	Pintle Hook 7 Way Receptacle - Resecure (RE) - One only	0.25
10076	Pintle Hook Circuit Breaker - Re-wire (RW)	0.25
10077	Pintle Hook Circuit Breaker - Replace (RP)	0.25
10078	Twist Lock and Pin Lock Assemblies and Ac - Replace (RP) - Each (Max 2	1.00
10079	Twist Lock and Pin Lock Assemblies and Ac - Free-Up Frozen Pin Lock	0.25
10080	Front Pin Lock Index Pin - Replace (RP) Weld On - Each (Max 2)	0.50
10081	Front Pin Lock Index Pin - Replace (RP) Bolt On - Each (Max 2)	0.25
10084	Front Pin Lock Handle - Straighten (GS) - Each (Max 2)	0.25
10085	Front Pin Lock Handle - Straighten & Weld (GW) - Each (Max 2)	0.25
10086	Front Pin Lock Handle - Replace (RP) - Each (Max 2)	0.50
10087	Front Lock Pin Handle Catch / Retainer - Straighten (GS) - Each (Max 2	0.25

10088	Front Lock Pin Handle Catch / Retainer - Straighten & Weld (GW) - Each	0.25
10089	Front Lock Pin Handle Catch / Retainer - Replace (RP) - Each (Max 2)	0.25
10091	Front Lock Pin Spring - Replace (RP) - Each (Max 2)	0.25
10092	Twist Lock Housing - Replace (RP) - Each	1.50
10095	Twist Lock (Complete) - Replace (RP) - Each	0.75
10096	Twist Lock (Complete) - Free up (FR)	0.25
10097	Twist Lock Riser Block - Replace (RP) - Each	0.50
10098	Twist Lock Handle - Straighten (GS) - First	0.25
10099	Twist Lock Handle - Straighten (GS) - ea. add'l	0.25
10100	Twist Lock Handle - Straighten & Weld (GW) - First	0.50
10101	Twist Lock Handle - Straighten & Weld (GW) - ea. add'l	0.25
10102	Twist Lock Handle - Replace (RP) (Weld on type) - First	0.50
10103	Twist Lock Handle - Replace (RP) (Weld on type) - ea. add'l	0.25
10104	Twist Lock Handle - Replace (RP) (Bolt on type) - First	0.25
10105	Twist Lock Handle - Replace (RP) (Bolt on type) - ea. add'l	0.25
10106	Twist Lock Handle Retainer / Catch - Straighten (GS) - Each	0.25
10107	Twist Lock Handle Retainer / Catch - Straighten & Weld (GW) - First	0.25
10108	Twist Lock Handle Retainer / Catch - Straighten & Weld (GW) - ea. add'l	0.25
10109	Twist Lock Handle Retainer / Catch - Replace (RP) - Each	0.25
10111	Twist Lock Handle Catch - Straighten (GS) - First	0.25
10112	Twist Lock Handle Catch - Straighten (GS) - ea. add'l	0.25
10113	Twist Lock Handle Catch - Replace (RP) - Each	0.25
10114	Twist Lock Spring - Replace (RP) - Each	0.25
10115	ICC Bumper (Complete) - Replace (RP) Complete assembly	2.00
10116	ICC Bumper - Vertical Post - Replace (RP) - Each (Max 2)	0.50
10117	ICC Bumper - Vertical Post - Straighten (GS) - Each (Max 2)	0.50
10118	ICC Bumper - Crosspiece - Replace (RP) - One only	0.50
10119	ICC Bumper - Crosspiece - Straighten (GS) - Overall length	0.50
10120	ICC Bumper - Crosspiece - Straighten (GS) - Two (2) projecting end	0.75
10121	Bumper Filler Plate - Replace (RP) Incl. (RR) all fittings etc. - One	0.50
10122	License Plate - Replace (RP) - One only	0.25
10123	License Plate - Resecure (RE) - One only	0.10
10124	Fleet Number Decals - Replace (RP) (Complete set) - 4 fleet numbers and pref	1.00
10125	Fleet Number Decals - Replace (RP) (One only) - Fleet number and pref	0.25
10126	Fleet Number Decals - 'Replace (RP) - Fleet number only	0.15
10127	Fleet Number Decals - 'Replace (RP) - Prefix only (owners code)	0.10
10128	Fleet Number Decals - 'Replace (RP) - Any single Character	0.10
10129	Owners Logo - Replace (RP) - Set of two (2)	0.25
10130	Owners Logo - Replace (RP) - One only	0.25
10131	Tare Weight Stencil or Decal - Replace (RP) - Each	0.25
10132	Fleet Number Decals - Stencil Chassis - Prefix & numbers - Each Side	0.25
10133	Owners Logo - Stencil Chassis - Owners Logo - Each Side	0.25
10134	Manufacturer's Data Plate - Replace (RP) - One only	0.25

10135	Manufacturer's Data Plate - Resecure (RE) - One only	0.10
10136	FHWA Plate - Replace (RP) - One only	0.25
10137	FHWA Plate - Resecure (RE) - One only	0.10
10138	FHWA Overlay Decal - Replace (RP) - One only	0.25
10139	FHWA Date Overlay Decal - Replace (RP) - One only	0.25
10140	Airing Decal and Plate - Replace Plate (RP) - One only	0.25
10141	Airing Decal and Plate - Replace (decal) (RP) - One only	0.10
10142	Caution Decal - Replace (RP) - Each	0.10
10143	Conspicuity Tape - Replace (RP) - 8'	0.25
10144	Document Holder - Resecure (RE) - One only	0.10
10145	Document Holder - Replace (RP) - One only	0.25
10146	Registration Certificate - Replace (RP) - one one	0.25
10147	Electrical Circuitry - Trace electrical short - Complete system outage	0.50
10148	Wiring - Splice - 14 GA wiring	0.10
10149	Wiring - Splice - 7 way cable	0.50
10152	Receptacle 7 way - Re-wire(RW) - One only	0.50
10153	Receptacle 7 way - Resecure (RE) - One only	0.10
10154	Receptacle 7 way - Replace (RP) - One only	0.75
10155	Receptacle Cover - Replace (RP) - One only	0.10
10156	Circuit Breaker - Replace (RP) - Each (Max 2)	0.25
10157	Re-Wire Chassis - Re-wire (RW) Complete unit - 23.5 ft	3.00
10158	Re-Wire Chassis - Re-wire (RW) Complete unit - 40.6 ft	3.50
10159	Clearance Light - Re-wire(RW) - Each (Max 4)	0.25
10160	Clearance Light - Resecure (RE) - Each (Max 4)	0.10
10161	Clearance Light - Replace [RP] - Each [Max4]	0.25
10163	Tail Light or turn signal - Re-wire(RW) - Each (Max 4)	0.25
10164	Tail Light or turn signal - Resecure (RE) - Each (Max 4)	0.10
10165	Tail Light or turn signal - Replace (RP) - Each (Max 4)	0.25
10166	Reflectors - Replace - 1 thru 3	0.25
10167	Reflectors - Replace - 4 thru 6	0.50
10168	Reflectors - Replace - above 6	0.75
10169	Lense & Bulb - Replace (RP) - First (Up to 6)	0.25
10170	Lense & Bulb - Replace (RP) - ea. add'l 1 to 3	0.15
10171	License Plate Light Assembly - Re-wire(RW) - One only	0.25
10172	License Plate Light Assembly - Resecure (RE) - One only	0.25
10173	License Plate Light Assembly - Replace (RP) - One only	0.25
10174	Glad Hand - Resecure (RE) - Each	0.10
10175	Glad Hand - Replace (RP) - Each	0.25
10176	Glad Hand - Straighten (GS) - Each	0.25
10177	Glad Hand Seal - Replace (RP) - Each	0.10
10178	Air Brake Line - Section (SN) - Labor only - First 36 in	0.50
10179	Air Brake Line - Section (SN) - Labor only - ea. add'l 12in	0.15
10180	Air Brake Line - Tighten Fittings for Air Brake Line	0.25

10181	Air Brake Line Coupling - Replace (RP) - Each set	0.25
10182	Air Brake Line Coupling - Tighten (RE) - Each set	0.10
10183	Air Reservoir Tank - Replace (RP) - Labor only - Each	1.50
10184	Air Reservoir Tank - Resecure (RE) - Each tank	0.25
10185	Air Reservoir (Tank) Drain Cock - Replace (RP)	0.25
10186	Air Reservoir (Tank) Nipple - Replace (RP)	0.50
10187	Relay Emergency Valve or Spring Brake Val - Replace (RP) - Each	1.50
10188	Air Valve - Replace (RP) - Each	1.50
10190	Anti Skid Controller - Replace (RP) - ECU - Each (Max 2)	1.50
10191	Anti Skid Assembly (Complete) - Replace (RP) - One only	2.00
10192	Air Brake Hoses - Replace (RP) - Each	0.50
10193	Air Brake Hoses - Install Brake Hose Separator - Up to 3	0.25
10194	Air Brake Hoses - Install Brake Hose Separator - 4 or more	0.50
10195	Air Hose Support Spring - Replace (RP)	0.25
10196	Kingpin Assembly - Replace (RP) - One only	12.00
10197	Kingpin Only - Replace (RP) - One only	4.00
10198	Kingpin Re-Enforcing Frag - Replace (RP) - First	2.00
10199	Kingpin Re-Enforcing Frag - Replace (RP) - Ea. add'l	1.50
10200	Upper Coupler (Kingpin) Plate - Replace (RP) - One only	10.00
10201	Pick-up Plate - Replace (RP) - One only	1.50
10202	Landing Gear (Complete) - Replace (RP) - Complete	5.00
10203	Landing Gear Leg (set of two) - Replace (RP) - Two leg set	5.00
10204	Landing Gear Leg (set of two) - Remove & refit (RR) - Complete	4.00
10205	Landing Gear Leg (set of two) - Straighten (GS) - Two legs	1.00
10206	Landing Gear Leg (set of two) - Re-time (ZZ) - Per set of landing leg	0.50
10207	Landing Leg - Replace (RP) - Labor on - One drive leg	2.00
10208	Landing Leg - Resecure (RE) - One only	0.50
10209	Landing Gear Leg (Slave Leg) - Replace (RP) - One only	2.00
10210	Landing Gear Leg (Slave Leg) - Resecure (RE) - One only	0.50
10211	Landing Gear Leg (Slave Leg) - Straighten (GS)	1.00
10212	Landing Gear Leg (Slave Leg) - Straighten and Weld (GW) - One only	1.25
10213	Landing Leg Mounting Bracket - Replace (RP) - One only	2.75
10214	Landing Leg Mounting Bracket - Straighten and Weld (GW)	2.00
10215	Landing Leg Gear Box Assembly - Replace (RP) - Complete	1.50
10216	Landing Leg Gear Box Assembly - Replace (RP) - One gear	0.75
10217	Landing Leg Gear Box Assembly - Straighten & Align Gear Box Assembly	0.75
10218	Landing Leg Gear Box Outer Cover - Replace (RP) - One only	0.50
10219	Landing Leg Gear Box Outer Cover - Resecure (RE) - One only	0.25
10220	Landing Leg Top Cover - Replace (RP)	0.15
10221	Landing Leg Top Cover - Resecure (RE) - One only	0.10
10222	Landing Leg Gear Crank Shaft - Replace (RP) - One only	1.00
10223	Landing Leg Gear Crank Shaft - Straighten (GS) - One only	0.35
10224	Landing Gear Roll Pin - Replace (RP) - Quantity up to 3	0.50

10225	Landing Gear Crank Handle - Replace (RP) - One only	0.25
10226	Landing Leg Crank Shaft Handle Retainer - Straighten (GS) - One only	0.25
10227	Landing Leg Crank Shaft Handle Retainer - Replace (RP) - One only	0.25
10228	Landing Gear Crossover Shaft - Replace (RP) - One only	0.50
10229	Landing Gear Axle Housing - Replace (RP) - Each (Max 2)	0.50
10230	Landing Gear Axle Housing - Straighten (GS) - Each (Max 2)	0.50
10231	Landing Gear Sand-Shoe Axle and Axle Hous - Replace (RP) - Each	0.75
10232	Landing Gear Axle - Replace (RP) - Each	0.50
10234	Sand Shoe (Only) - Replace (RP) - Each	0.25
10235	Sand Shoe (Only) - Resecure (RE) - Each	0.10
10236	Landing Leg Cross Brace - Straighten (GS) - Overall length	0.25
10237	Landing Leg Cross Brace - Resecure (RE) - Both sides	0.25
10238	Landing Leg Cross Brace - Replace (RP) - 3" Channel Only	0.50
10239	Landing Leg Diagonal Brace - Straighten (GS) - overall length	0.50
10240	Landing Leg Diagonal Brace - Resecure (RE)	0.10
10241	Landing Leg Diagonal Brace - Replace (RP)	0.50
10242	Landing Leg Brace Ear - Resecure (RE) - Each	0.25
10243	Landing Leg Brace Ear - Replace (RP) - Each	0.50
10246	Frame Extension Rollers / Slide Pads - Lubricate (LC)	0.50
10247	Frame extension Lock Pin - Resecure (RE) - Each	0.25
10248	Frame extension Lock Pin - Replace (RP) - Each	0.75
10249	Slider Assembly (Complete) - Remove & refit (RR) - Type 1	4.00
10250	Slider Assembly (Complete) - Remove & refit (RR) - Type 2	4.00
10251	Slider Assembly (Complete) - Replace (RP) - Type 1	20.00
10252	Slider Assembly (Complete) - Replace (RP) - Type 2	20.00
10253	Slider Assembly Main Rails - Replace (RP) - Type 1	12.00
10254	Slider Assembly Main Rails - Replace (RP) - Type 2	12.00
10255	Slider Retaining Rail (Type 1 slider) (B - Resecure (RE) - Each rail	0.50
10256	Slider Retaining Rail (Type 1 slider) (B - Replace (RP) - Each rail	2.00
10257	Slider Retaining Stop Blocks - Weld (WD) - Each	0.50
10258	Slider Retaining Stop Blocks - Replace (RP) - Each	0.75
10259	Slider Locking Pin Assembly - Replace (RP) - One only	3.00
10260	Slider Locking Pin (In cage) Linkage - Replace (RP) - Complete	1.00
10261	Slider Indexing Locking Pin - Replace (RP) - Each	0.50
10262	Slider Locking Pin Hole Re-Enforcing Plat - Replace (RP) - Each	1.00
10263	Slider Locking Pin Handle - Resecure (RE) - One only	0.25
10264	Slider Locking Pin Handle - Replace (RP) - One only	0.25
10265	Slider Locking Pin Handle - Straighten (GS) - One only	0.25
10266	Equalizer Beam Only - Re-bush (RU) - Each	2.50
10267	Equalizer Beam Only - Replace (RP) - Each	2.00
10268	Central Equalizer - Replace (RP)	4.00
10269	Central Equalizer Hanger (only) - Replace (RP) - Each	3.00
10270	Spring Hangers (Front and Rear) - Replace (RP) - One Front Hanger only	3.00

10271	Spring Hangers (Front and Rear) - Replace (RP) - Two front Hangers	5.00
10272	Spring Hangers (Front and Rear) - Replace (RP) - One Rear Hanger	3.00
10273	Spring Hangers (Front and Rear) - Replace (RP) - Two rear Hangers	5.00
10276	Spring or Equalizer Hanger Cross Brace - Replace (RP) - Each	1.00
10277	Spring Hanger Cross Brace - Replace (RP) - Each	1.50
10278	Suspension Spring Assembly - Replace (RP) - Complete (3 leaf) spri	2.00
10279	Suspension Spring Seat - Replace (RP) - Each	2.00
10280	Suspension Spring Saddle - Replace (RP) - Each	0.50
10281	U Bolt Assembly - Replace (RP) - Each assembly	1.00
10282	U Bolt Only - Resecure (RE) - Each set	0.25
10283	U Bolt Only - Replace (RP) - Each set	0.75
10284	U Bolt Spacer Plate - Replace (RP) - Each	1.00
10285	Radius Rod - Adjustable - Adjust (AJ) Per axle - Each	1.00
10286	Radius Rod - Adjustable - Replace (RP) Per axle - Each	1.50
10287	Radius Rod - Adjustable - Resecure (RE) - Each	0.50
10289	Radius Rod - Non-Adjustable (Fixed) - Replace (RP) - Each	1.50
10290	Axle Assembly - Re-align (RA) - One axle	0.75
10291	Axle Assembly - Re-align (RA) - Two axles	1.50
10292	Axle Assembly - Replace (RP) - Ea.	8.00
10293	Axle Nut - Replace (RP) - Each	0.50
10294	Hub Cap (Grease Type) - Replace with broken bolt (RP) - Each	0.75
10295	Hub Cap (Grease Type) - Replace (RP) - Each	0.35
10296	Hub Cap (Oil Type) - Replace with broken bolt (RP) - Each	0.75
10297	Hub Cap (Oil Type) - Replace (RP) - Each	0.35
10298	Brake Chamber Mounting Bracket - Replace (RP)	1.50
10299	Brake Chamber - Spring brake conversion - Per Pair	3.00
10300	Brake Chamber - Replace (RP) - First	1.25
10302	Brake Chamber Push Rod - Straighten (GS) - Each	0.25
10304	Push Rod Clevis (Including Pin) - Replace - Each	0.25
10305	Slack Adjuster - Replace (RP) - Each	0.75
10306	Slack Adjuster - Adjust only (AJ) - Per unit	0.25
10307	Brake 'S' Cam - Replace (RP) (With wheel removed) - Each	0.50
10308	Brake 'S' Cam - Replace only (RP) - Each	1.50
10309	Brake 'S' Cam Bushing - Replace (With wheel removed) - Each	0.50
10310	Brake 'S' Shaft Bracket - Replace (RP) - Each	0.75
10311	Brake Shoe Assembly - Replace any Brake Kit Part w/o Brake Repl	1.25
10312	Brake Shoe Assembly - Replace (RP) (Includes (RR) - One wheel only	2.00
10313	Brake Shoe Assembly - wheels) - Two wheels	4.00
10314	Brake Shoe Assembly - wheels) - All four wheels	6.00
10315	Brake Shoe Assembly - Free-up Frozen Anchor Pin	0.50
10316	Brake Shoe Assembly - Replace (RP) Drum or Hub W/ Brake Job	1.75
10317	Brake Shoe Assembly - Replace (RP) Bearing W/ Brake Job	0.50
10318	Brake Shoes - Replace (RP) - One wheel only	2.00

10319	Brake Shoes - Replace (RP) - Per set of 2	4.00
10320	Brake Shoes - Replace (RP) - Per set of 4	7.00
10321	Brake Drum (10 stud (Budd) Type) - Replace (RP) - Labor only	2.00
10322	Brake Drum (Standard 5 spoke type) - Replace (RP) - Labor only	2.00
10323	Wheel (Hub) (Budd Type) - Replace (RP) - Labor only - Each	2.00
10324	Wheel (Hub) (Standard Spoke Type) - Replace (RP) - Labor only	2.00
10325	Oil Seal - Replace (RP) - Each	1.50
10326	Grease Seal - Replace (RP) - Each	1.50
10327	Wheel Nut - Resecure (RE) or Replace(RP) - 1 to 5 nuts	0.25
10328	Wheel Stud - Replace (RP) - Each	0.50
10329	Drill Out and Replace Rim Clamp, Stud and - Resecure (RE) - Each	0.50
10330	Drill Out and Replace Rim Clamp, Stud and - Replace (RP) - Each	0.50
10331	Wheel Rim - Replace (RP) - Each Standard - New Ri	0.75
10332	Wheel Rim - Replace (RP) - Each Standard - Used R	0.75
10333	Wheel Rim - Replace (RP) - Each Budd - New Rim	0.75
10334	Wheel Rim - Replace (RP) - Each Budd - Used Rim	0.50
10335	Wheel Rim Spacer - Replace (RP) - Each	0.50
10336	Tires - Air (AR) - With tire (RP) or repair	0.25
10337	Tires - Air (AR) - Without Tire (RP) or repair	0.25
10338	Tires - Patch (PT) (Tube or Tubeless) - Each	0.10
10339	Tires - Switching - Per Tire	0.50
10340	Tires - Dismount Tire - Per Tire	0.35
10342	Tires - Tire Handling - Pick up & Delivery to/from the road	0.50
10343	Tires - Tire Handling - Receiving, Checking, & Loading	0.50
10344	Tires - Replace (RP) - Labor only - Each tire	0.50
10345	Tire Stem - Replace (RP) - With tire repair	0.25
10346	Tires - Mount Tire - Per Tire	0.35
10348	Chassis (Entire) - Grease lubricate (LC) - All	1.00
10349	Wheel Rim - Clean Oil Soaked Rims - First	0.50
10350	Wheel Rim - Clean Oil Soaked Rims - Each add'l	0.25
10351	BIT - Inspection	0.50
10352	PM - Inspection	1.00
10353	Drayage for M & R (round)	0.50
10357	Sand Shoe & Axle - Replace (RP) - Each	0.50
10359	Brake Chamber - Replace (RP) - each add'l	1.00
10360	Tires - Replace (RP) - Labor only - In-conjunction	0.35
10361	Front Bolster - Fish Plate - Each 24"	2.50
10362	Front Bolster Gusset - Straighten (GS) - Each	0.25
10363	Front Bolster Gusset - Straighten & Weld (GW) - Each	0.75
10364	Container Guide - Straighten (GS) - Each	0.50
10365	Container Guide - Straighten & Weld (GW) - Each	0.75
10366	Genset Bar Bracket - Straighten (GS)	0.50
10367	Genset Bar Bracket - Straighten & Weld (GW)	0.75

10368	Rear Deck Plate - Straighten (GS) - First 6 in.	0.50
10369	Rear Deck Plate - Straighten (GS) - ea. add'l 6 in.	0.25
10370	Rear Deck Plate - Straighten & Weld (GW) - First 6 ins	0.75
10371	Rear Deck Plate - Straighten & Weld (GW) - ea. add'l 6 ins	0.50
10373	Front Pin Lock Index Pin - Resecure (RE) - Each	0.25
10374	Front Lock Pin Spring - Resecure (RE)	0.25
10375	Twist Lock (Complete) - Resecure (RE)	0.25
10376	ICC Bumper - Vertical Post - Straighten & Weld (GW)	0.75
10377	ICC Bumper - Crosspiece - Straighten & Weld (GW)	1.00
10378	ICC Bumper - Crosspiece - Cut-off ICC Bumper Ends	0.50
10379	Conspicuity Tape - Resecure (RE)	0.25
10380	Document Holder - Replace (RP) - Doc Holder Cover only	0.10
10381	Wiring - Replace Electrical Harness at Rear	0.50
10382	Wiring - R & R Lights & Wire for Light Bar Repair	1.00
10383	Clearance Light - Replace Marker Lite Bracket	0.50
10384	Clearance Light - Replace Marker Lite Pig-Tail	0.25
10385	Tail Light or turn signal - Replace Stop / Turn Light Pig-Tail	0.25
10386	Glad Hand - R & R Glad Hands & 7 Way Plug for Repair	1.50
10387	Glad Hand - Replace Glad Hand Mounting Bracket	1.50
10388	Glad Hand - Reseal Threads - Each	0.25
10389	Glad Hand - Reposition Glad Hand	0.15
10390	Air Brake Line - Install Zert Fitting	0.25
10391	Air Brake Line - Install Tank to Tank Air Line	0.50
10392	Air Brake Line - R & R Air Lines & Wire Cord at G/Neck for	1.50
10393	Air Brake Line - E-Z out Broken Fitting - Each	0.50
10394	Air Reservoir (Tank) Drain Cock - Resecure (RE)	0.25
10395	Air Reservoir (Tank) Nipple - Resecure (RE)	0.50
10396	Air Valve - Free up & Lube - Each	1.00
10397	Air Brake Hoses - R & R Air Hoses To Complete the Job	1.00
10398	Landing Leg Mounting Bracket - Reem Leg Mounting Holes to 5/8" - Each	1.00
10399	Landing Leg Mounting Bracket - Replace Leg Mounting Bolts - Each Side	1.00
10400	Landing Leg Gear Box Assembly - Replace Long & Short Bushing	0.50
10401	Landing Leg Gear Box Assembly - Turn Inner Leg back into notch	0.50
10402	Landing Leg Gear Box Assembly - Secure Hi / Low Shaft Inner Bushing	0.25
10403	Landing Leg Gear Box Assembly - Free up & Lube	0.50
10404	Landing Gear Crank Handle - Resecure (RE) - One only	0.10
10405	Landing Gear Crank Handle - Straighten (GS) - One only	0.25
10406	Landing Gear Axle - Resecure (RE) - Per Pair	0.25
10407	Sand Shoe (Only) - Straighten (GS) - Each	0.25
10408	Landing Leg Brace Ear - Straighten (GS) - Each	0.25
10409	Landing Leg Brace Ear - Straighten & Weld (GW) - Each	0.50
10410	Slider Assembly Main Rails - Replace Slider Hose Tension Spring	0.50
10411	Slider Locking Pin Handle - Replace Slider Lock Handle Spring	0.25

10412	Slider Handle Safety Lock Bracket - Straighten & Weld (GW)	0.75
10413	Suspension Spring Assembly - Reinstall Spring into Equalizer	1.00
10414	Axle Assembly - Strip Down & Send out for Repair - Each Axel	8.00
10415	Hub Cap (Oil Type) - Clean & Refill Hubs	0.25
10416	Brake Chamber Mounting Bracket - Straighten (GS)	0.50
10417	Brake Chamber Mounting Bracket - Straighten and Weld (GW)	1.00
10418	Brake Chamber Push Rod - Free up Push Rod Pin	0.25
10419	Push Rod Clevis (Including Pin) - Tighten Clevis Lock Nut - All	0.50
10420	Slack Adjuster - Free-Up & Adjust	0.50
10421	Brake 'S' Cam - Free-up & Lube	0.50
10422	Brake Shoe Assembly - Reinstall Loose Brake Shoe Tension Spring	0.50
10423	Brake Shoe Assembly - Release All Brakes	0.50
10424	Anti Skid Assembly (Complete) - Trouble-shoot Faulty ABS System	1.00
10425	ABS Electrical - Replace ABS Valve	0.50
10426	ABS Electrical - Replace ABS Lamp	0.25
10427	ABS Electrical - Replace ABS Reciter Ring	2.50
10428	ABS Electrical - Replace ABS Sensor Block / Clip	0.50
10429	ABS Electrical - Clean Adjust ABS Wheel Sensor - Each	0.50
10430	ABS Electrical - Clean & Secure ABS Electrical Harness	0.50
10431	ABS Electrical - R & R ABS Test Plug	0.50
10434	Paint Over Grafitti	0.25
10435	Steam Clean Entire Chassis	1.00
10436	Main Frame - Doubler / Fish Plate - Each 24"	2.50
10437	Docking Bumpers - Replace Dock Bumper Bolts	0.25
10438	Front Pin Lock Index Pin - Straighten Front Pin Lock Housing	0.75
10439	Front Pin Lock Index Pin - Straighten & Weld Front Pin Lock Housing	1.25
10440	Twist Lock Housing - Straighten (GS) - Each (Max 2)	0.75
10441	Twist Lock Housing - Straighten & Weld (GW) - Each (Max 2)	1.25
10442	Wiring - Resecure Electric Wiring (Minor)	0.25
10443	Wiring - Resecure Electric Wiring (Major)	0.75
10444	Spring Hangers (Front and Rear) - Straighten (GS) - Each	0.75
10445	Spring Hangers (Front and Rear) - Straighten & Weld (GW) - Each	1.50
10446	Tires - Mount or Dismount Tire Only - Per Tire	0.40
10448	Paint orange on front & rear on bolsters for safety	0.25
10505	LABP STENCILING	0.20
10506	Restencil and Inspection	0.35
10507	Pre - Inspection	0.06
10508	Tires - Stuffing	0.25
10509	TIRE MOUNT/DISMOUNT/STUFFING	0.84
10510	ABS Electrical - Replace ABS complete system	2.50
10511	Air Valve - Resecure - ea.	0.75
10512	Brake Shoe - Refit shoe or other hardware	0.33
10513	Bulkhead bracket - straighten	0.75

10514	Clearance Light - Replace Marker Lite Bracket include RR	0.75
10515	Equalizer - Replace (RP) - ea.	4.00
10516	Equalizer Hanger (only) - Replace (RP) - ea.	3.00
10517	Equalizer Hanger Cross Brace - Straighten	0.50
10518	Equalizer Hanger Cross Brace - Weld	0.25
10519	Glad Hand - Bulkhead fitting	1.00
10520	Glad Hand - Remove	0.25
10521	Hub Cap (Grease Type) Refasten - ea.	0.15
10522	Hub Cap (Oil Type) - Clean	0.10
10523	Hub Cap (Oil Type) - Replace (RP) - ea.	0.35
10524	Hub Cap Gasket (Grease Type) - Replace (RP) - ea.	0.35
10525	Hub Cap Gasket (Grease Type) - Replace (RP) - ea.	0.35
10526	Landing Leg Brace Ear - Weld	0.35
10527	Rear Deck Plate - ReFasten	0.30
10528	Slider Guide Plate - Resecure Bolts (per side)	0.25
10529	Slider Guide Plate - Weld - either side - add. 6"	0.25
10530	Spring Hanger Cross Brace - Straighten	0.50
10531	Spring Hanger Cross Brace - Weld	0.25
10532	Tire - Patch	0.75
10533	Tire Inner Tube - RP	0.75
10534	Tire Stem - Replace (RP) - Without tire repair	0.50
10535	Wheel Bearing / Inner - Replace	1.75
10536	Wheel Bearing / Inner - Replace - W/ Brake Job	0.25
10537	Wheel Bearing / Outer - Replace	1.75
10538	Wheel Bearing / Outer - Replace - W/ Brake Job	0.25
10539	Tires - Unstuffing	0.25
10540	Tire handling	1.00
10542	Clearance Light - Replace [RP] - Each	0.25
10547	Tail Light or turn signal - Replace (RP) - Each (Max 2)	0.25
10548	Tail Light or turn signal - Replace (RP) - Each (Max 2) each addition	0.25
10549	R & R Landing Leg Gear Box	0.50
10550	Tube Replace	1.00
10551	Tires - Replace (RP) - Labor only - Outside	0.50
10552	Tires - Replace (RP) - Labor only - Inside	0.75
10553	Joint Chassis Chassis Inspection	0.50
10554	VALVE STEM FLOW CAP INSTALLATION UP TO 8	0.10
JOB NO	REEFER STRUCTURAL JOB DESCRIPTION	Time/Hours*
20000	Replace (RP) Squeezing bolt & nut for roof dela - Each	0.50
20001	Replace (RP) Side bottom rails whole section - - 20 ft	28.00
20009	Section(SN) Side bottom rails assy- Aluminum - First 39 ins	7.50
20013	Section(SN) Side bottom rails assy- Aluminum - ea. Add'l 12 ins	1.00
20017	Section (SN) Side bottom rails assy - Aluminum - First 39 ins	6.50
20024	Install (IN) Drill stop holes in rail crack and	1.50

20030	Straighten (GS) Side bottom rails assy - Alumin - First 12 ins	0.50
20033	Straighten (GS) Side bottom rails assy - Alumin - ea. add'l 12 ins	0.50
20036	Str. (GS) Side bottom rail lower flange - Alum - First 6 ins	0.50
20039	Str. (GS) Side bottom rail lower flange - Alum - ea. add'l 6 ins	0.25
20052	Replace (RP) Side bottom rails whole section - - 40 ft	50.00
20060	Section (SN) Side bottom rails assy - Steel - ea. add'l 6 ins	0.50
20064	Insert (IT) Side bottom rails assy - Steel - First 12 ins	1.50
20068	Insert (IT) Side bottom rails assy - Steel - ea. add'l 6 ins	0.50
20072	Straighten (GS) Side bottom rails assy - Steel - First 12 ins	0.50
20075	Straighten (GS) Side bottom rails assy - Steel - ea.add'l 6 ins	0.25
20078	Str. (GS) Side bottom rail lower flange - Steel - First 12 ins	0.50
20081	Str. (GS) Side bottom rail lower flange - Steel - ea. add'l 6 ins	0.25
20084	Straighten & Weld (GW) Side bottom rails assy -Steel - First 6 ins	0.50
20088	Straighten & Weld (GW) Side bottom rails assy -Steel - ea.add'l 6 ins	0.25
20092	Weld (WD) Side bottom rails assembly - Steel - First 6 ins	0.50
20095	Weld (WD) Side bottom rails assembly - Steel - ea.add'l 6 ins	0.25
20110	Replace (RP) T - clip - First	0.75
20113	Replace (RP) T - clip - ea. add'l	0.50
20116	Replace (RP) Crossmembers - Steel - First	1.50
20119	Replace (RP) Crossmembers - Steel - ea. add'l	1.25
20122	Over lapping partial section (OP) Crossmembers - First	2.50
20125	Over lapping partial section (OP) Crossmembers - ea.add'l	2.00
20128	Insert (IT) Crossmember - Steel - First 6 ins	0.75
20131	Insert (IT) Crossmember - Steel - ea.add'l 6 ins	0.50
20134	Straighten (GS) Crossmember - Steel (Full profi - First	0.75
20137	Straighten (GS) Crossmember - Steel (Full profi - ea. add'l	0.75
20140	Straighten & Weld (GW) Crossmember - Steel - First 6 ins	0.50
20144	Straighten & Weld (GW) Crossmember - Steel - ea. add'l 6 ins	0.25
20148	Weld (WD) Crossmember - Steel - First 6 ins	0.50
20151	Weld (WD) Crossmember - Steel - ea. add'l 6 ins	0.25
20154	Straighten (GS) Crossmember Lower flange - First	0.50
20157	Straighten (GS) Crossmember Lower flange - ea. add'l	0.25
20160	Replace (RP) Outriggers - Steel - First	1.25
20166	Straighten (GS) Outriggers - Steel(Full profil - First	0.50
20169	Straighten (GS) Outriggers - Steel(Full profil - ea. add'l	0.50
20172	Straighten (GS) Outrigger Lower flange - First	0.25
20175	Straighten (GS) Outrigger Lower flange - ea. add'l	0.25
20178	Replace (RP) Understructure power cable grommet - Up to 3	0.25
20181	Replace (RP) Forklift pockets assembly - Each	8.00
20184	Overlapping partial section (OP) Forklift pocke - First	2.00
20187	Overlapping partial section (OP) Forklift pocke - ea. add'l	1.00
20190	Replace (RP) Forklift pocket strap - First	0.75
20193	Replace (RP) Forklift pocket strap - ea. add'l	0.75

20196	Straighten (GS) (Insitu) Forklift pocket strap - First strap	0.50
20198	Straighten (GS) (Insitu) Forklift pocket strap - ea. add'l strap	0.50
20200	Str. & Weld (GW) (Insitu) Forklift pocket strap - First strap - one s	0.75
20204	Str. & Weld (GW) (Insitu) Forklift pocket strap - ea. add'l strap side	0.75
20208	Weld (WD) (Insitu) Forklift pocket strap - First strap - one si	0.25
20211	Weld (WD) (Insitu) Forklift pocket strap - ea. add'l strap side	0.25
20214	Remove & Refit (RR) Forklift pocket strap - First strap	0.75
20217	Remove & Refit (RR) Forklift pocket strap - ea. add'l strap	0.75
20220	Replace (RP) Gooseneck tunnel assy Incl. Rails,	14.00
20224	Replace (RP) Gooseneck tunnel longitudinal rail - 124 ins	7.00
20228	Insert (IT) Gooseneck tunnel longitudinal rail - 124 ins	6.50
20232	Insert (IT) Gooseneck tunnel longitudinal rail - First 12 ins	1.25
20235	Insert (IT) Gooseneck tunnel longitudinal rail - ea. add'l 6 ins	0.25
20238	Straighten (GS) Gooseneck tunnel longitudinal - First 6 ins	0.50
20241	Straighten (GS) Gooseneck tunnel longitudinal - ea. add'l 6 ins	0.25
20244	Str. & Weld (GW) Gooseneck tunnel longitudinal - First 6 ins	0.75
20247	Str. & Weld (GW) Gooseneck tunnel longitudinal - ea. add'l 6 ins	0.25
20250	Weld (WD) Gooseneck tunnel longitudinal rail - First 6 ins	0.50
20253	Weld (WD) Gooseneck tunnel longitudinal rail - ea. add'l 6 ins	0.25
20256	Replace (RP) Front bottom rail whole section - Full Length	12.00
20262	Section (SN) Front bottom rail assembly - First 6 ins	2.25
20265	Section (SN) Front bottom rail assembly - ea.add'l 6 ins	1.25
20268	Insert (IT) Front bottom rail whole section - Full length	4.50
20271	Insert (IT) Front bottom rail assembly - First 6 ins	0.75
20274	Insert (IT) Front bottom rail assembly - ea. add'l 6 ins	0.50
20277	Replace (RP) Rear bottom rail whole section - Full Length	9.00
20280	Insert (IT) Rear bottom rail whole section - Full length	6.00
20284	Section (SN) Rear bottom rail(Sill) assy - First 6 ins	2.00
20287	Section (SN) Rear bottom rail(Sill) assy - ea. add'l 6 ins	1.00
20290	Insert (IT) Rear bottom rail(Sill) assy - First 6 ins	1.00
20293	Insert (IT) Rear bottom rail(Sill) assy - ea. add'l 6 ins	0.50
20297	Straighten (GS) Front bottom rail assembly - First 6 ins	0.25
20300	Straighten (GS) Front bottom rail assembly - ea. add'l 6 ins	0.25
20303	Str. & Weld (GW) Front bottom rail assembly - First 6 ins	0.75
20306	Str. & Weld (GW) Front bottom rail assembly - ea. add'l 6 ins	0.50
20309	Weld (WD) Front bottom rail assembly - First 6 ins	0.50
20312	Weld (WD) Front bottom rail assembly - ea. add'l 6 ins	0.25
20315	Straighten (GS) Front bottom rail lower flange - First 6 ins	0.25
20318	Straighten (GS) Front bottom rail lower flange - ea. add'l 6 ins	0.25
20321	Replace (RP) Rear / Front bottom rail gussets - First	0.75
20325	Replace (RP) Rear / Front bottom rail gussets - Ea. add'l	0.25
20329	Straighten (GS) Rear / Front bottom rail gusset - First	0.25
20332	Straighten (GS) Rear / Front bottom rail gusset - ea.add'l	0.25

20335	Str. & Weld (GW) Rear / Front bottom rail gusse - First	0.75
20338	Str. & Weld (GW) Rear / Front bottom rail gusse - ea.add'l	0.50
20341	Weld (WD) Rear / Front bottom rail gussets - First	0.25
20343	Weld (WD) Rear / Front bottom rail gussets - ea. add'l	0.25
20345	Replace (RP) Rail Doubler Plates - Each	0.75
20348	Straighten & Weld (GW) Rail Doubler Plates - Each	0.25
20351	Remove & Refit (RR) Rail Doubler Plates - Each	0.50
20366	Replace (RP) Single Skin - Front Corner Post - Each	15.00
20368	Insert (IT) Single Skin - Front Corner Post - Full height	7.00
20371	Insert (IT) Front Corner Post Assembly - First 12 ins	2.50
20374	Insert (IT) Front Corner Post Assembly - ea. add'l 6 ins	1.00
20377	Str. (GS) Front Corner Post Assembly - First 6 ins	0.75
20380	Str. (GS) Front Corner Post Assembly - ea. add'l 6 ins	0.25
20383	Str. & Weld (GW) Front Corner Post Assy - First 6 ins	0.75
20386	Str. & Weld (GW) Front Corner Post Assy - ea. add'l 6 ins	0.50
20389	Weld (WD) Front Corner Post Assembly - First 6 ins	0.50
20392	Weld (WD) Front Corner Post Assembly - ea. add'l 6 ins	0.25
20398	Re-tap (ZZ) Generator Securing Receptacle - Each	0.50
20400	Replace (RP) Complete Rear Corner Post - Each	15.00
20403	Straighten (GS) Rear Corner Post Full Height - Each	2.00
20406	Straighten (GS) Rear corner post Assembly - First 6 ins	0.50
20409	Straighten (GS) Rear corner post Assembly - ea. add'l 6 ins	0.50
20412	Str. & Weld (GW) Rear corner post Assy - First 6 ins	0.75
20415	Str. & Weld (GW) Rear corner post Assy - ea. add'l 6 ins	0.25
20424	Insert (IT) Rear Corner Post - J Bar - First 6 ins	0.75
20427	Insert (IT) Rear Corner Post - J Bar - ea. add'l 6 ins	0.50
20430	Straighten (GS) Rear Corner Post - J Bar - First 6 ins	0.25
20432	Straighten (GS) Rear Corner Post - J Bar - ea. add'l 6 ins	0.25
20434	Straighten & Weld (GW) Rear Corner Post - J Bar - First 6 ins	0.50
20437	Straighten & Weld (GW) Rear Corner Post - J Bar - ea. add'l 6 ins	0.25
20440	Replace (RP) Corner fitting - Each	3.00
20447	Replace (RP) Side top rails whole section - Alu - 40 ft	41.00
20452	Section(SN) Side top rails assy -Aluminum - First 39 ins	9.00
20454	Section(SN) Side top rails assy -Aluminum - ea. add'l 12 ins	1.00
20457	Section(SN) Side top rails assy - Aluminum - First 39 ins	6.00
20460	Section(SN) Side top rails assy - Aluminum - ea. add'l 12 ins	1.00
20463	Straighten (GS) Side top rails assy - Aluminum - First 12 ins	0.50
20465	Straighten (GS) Side top rails assy - Aluminum - ea. add'l 6 ins	0.50
20466	Install (IN) Drill stop holes & install back up - First 12 ins	2.00
20467	Replace (RP) Locking rod Cam keeper - Each	0.75
20471	Install (IN) Drill stop holes & install back up - ea. add'l 6 ins	1.00
20475	Install (IN) Angled doubler and flat filler pl - First 12 ins	1.50
20479	Install (IN) Angled doubler and flat filler pl - ea. add'l 6 ins	0.75

20486	Replace (RP) Side top rails whole section - Ste - 40 ft	44.00
20501	Straighten (GS) Side top rails assy - Steel - First 6 ins	0.50
20504	Straighten (GS) Side top rails assy - Steel - ea. add'l 6 ins	0.50
20507	Str. & Weld (GW) Side top rails assy - Steel - First 6 ins	0.50
20510	Str. & Weld (GW) Side top rails assy - Steel - ea. add'l 6 ins	0.50
20513	Weld (WD) Side top rails assembly - Steel - First 6 ins	0.25
20516	Weld (WD) Side top rails assembly - Steel - ea. add'l 6 ins	0.25
20519	Str. (GS) Front top rail(Header) assy - First 6 ins	0.50
20522	Str. (GS) Front top rail(Header) assy - ea. add'l 6 ins	0.25
20525	Str. & Weld (GW) Front top rail assy - First 6 ins	0.50
20528	Str. & Weld (GW) Front top rail assy - ea. add'l 6 ins	0.50
20531	Weld (WD) Front top rail(Header) assy - First 6 ins	0.25
20535	Weld (WD) Front top rail(Header) assy - ea. add'l 6 ins	0.25
20539	Insert (IT) Front top rail(Header) assy - First 6 in	1.00
20542	Section (SN) Rear top rail(Header) assy - First 6 in	1.75
20543	Insert (IT) Front top rail(Header) assy - ea. add'l 6 ins	0.50
20547	Section (SN) Front top rail(Header) assy - First 6 in	1.75
20551	Section (SN) Front top rail(Header) assy - ea. add'l 6 ins	1.00
20555	Patch (PT) - up to 225 sq. cm	1.00
20558	Patch (PT) - over 225 sq. cm F	2.00
20561	Replace (RP) Front top rail (Header) - Full Length, full pr	12.00
20564	Replace (RP) - Full length, full pr	16.00
20593	Patch (PT) by rivet Side and Door, inner panel- stainless steel	1.75
20602	Patch (PT) by rivet - Up to 225 sq.cm	1.00
20629	Foaming (ZZ) High density Up to - 36 sq. ins	0.50
20632	Foaming (ZZ) High density Over 36 sq. ins - Up to 144 sq. ins	0.75
20635	Foaming (ZZ) High density Over 144 sq. ins - ea. add'l 144 sq. in	0.50
20638	Foaming (ZZ) High density	15.00
20644	Foaming (ZZ) Low density Over 144 sq. ins - ea. add'l 144 sq. in	0.75
20647	Foaming (ZZ) Block Up to - 36 sq. ins	0.25
20650	Foaming (ZZ) Block Over 36 sq. ins - Up to 144 sq. ins	0.50
20653	Foaming (ZZ) Block Over 144 sq. ins - ea. add'l 144 sq. in	0.25
20789	Patch (PT) Side panel - 4 ft x 8 ft	6.00
20803	Patch (PT) by rivet Side panel - 4 ft x 8 ft	4.50
20806	Patch (PT) by rivet Side panel - 4 ft x 4 ft	3.90
20821	Replace (RP) by rivet Side panel - 20 ft	28.00
20825	Replace (RP) by rivet Side panel - 40 ft	48.00
20829	Patch (PT) by rivet Side panel - 4 ft x 8 ft	1.25
20832	Patch (PT) by rivet Side panel - 4 ft x 4 ft	0.75
20843	Patch (PT) Side inner panel - 4 ft x 8 ft	6.00
20846	Patch (PT) Side inner panel - 4 ft x 4 ft	4.50
20849	Replace (RP) Side panel - 20 ft	36.00
20852	Replace (RP) Side panel - 40 ft	60.00

20861	Replace (RP) Panel-Internal stiffener - First Post with stri	1.00
20865	Replace (RP) Panel-Internal stiffener - ea. add'l post w/ s	0.75
20873	Section (SN) Panel-Internal stiffener - ea. add'l 12 ins	0.35
20877	Replace (RP) Panel-Internal stiffener - First	0.50
20880	Replace (RP) Panel-Internal stiffener - ea. add'l stringer	0.50
20883	Section (SN) Panel-Internal stiffener - Up to 12 ins	0.75
20889	Straighten (GS) Panel-Internal stiffener - First side post w/ s	0.50
20892	Straighten (GS) Panel-Internal stiffener - ea. add'l	0.35
21232	Patch (PT) Roof inner panel - 4 ft x 8 ft	5.40
21238	Replace (RP) Roof inner panel - 20 ft	30.00
21246	Patch (PT) by rivet Roof inner panel - Up to 225 sq.cm	0.75
21249	Patch (PT) by rivet Roof inner panel - Over to 225 sq.cm	1.25
21252	Patch (PT) by rivet Roof inner panel- add'l	0.20
21255	Replace (RP) Roof inner panel - 40 ft	50.00
21258	Patch (PT) Roof inner panel - 4 ft x 8 ft	9.00
21264	Replace (RP) Roof bow with stringer - First	1.00
21268	Replace (RP) Roof bow with stringer - ea. add'l	0.75
21272	Straighten (GS) Roof bow with stringer - Each	1.00
21275	Replace (RP) Roof bow - First	1.00
21279	Replace (RP) Roof bow - ea. add'l	0.75
21283	Section (SN) Roof bow - First 12 ins	0.75
21287	Section (SN) Roof bow - Ea. add'l 12 ins	0.50
21291	Straighten (GS) Roof bow - First	1.00
21293	Straighten (GS) Roof bow - ea. add'l	0.75
21295	Replace (RP) Roof Bow Stringer - First	0.75
21298	Replace (RP) Roof Bow Stringer - ea. add'l	0.50
21301	Section (SN) Roof Bow Stringer - First 12 ins	0.75
21304	Section (SN) Roof Bow Stringer - ea. add'l 12 ins	0.50
21307	Replace (RP) Roof Panel Spacer - First	0.75
21310	Replace (RP) Roof Panel Spacer - ea.add'l	0.50
21313	Section (SN) Roof Panel Spacer - First 12 ins	0.75
21316	Section (SN) Roof Panel Spacer - ea. add'l 12 ins	0.50
21319	Replace (RP) Complete - Door Assy.(w/hardware)	3.50
21331	Replace (RP) Door outer panel only - Each. Using aluminum	8.50
21335	Replace (RP) Door outer panel only - Each. Using FRP shee	8.50
21339	Re-glass (RG) Door puter panel - First cumulative - 3	0.75
21342	Replace (RP) complete - Aluminum sheet - Each	6.00
21343	Re-glass (RG) Door puter panel - ea. add'l cum.- 36 s	0.25
21351	Replace (RP) complete - FRP sheet - Each	6.00
21355	Replace (RP) complete- St. Steel Sheet - Each	7.00
21359	Replace (RP) PVC profile - Complete frame	7.00
21363	Section (SN) PVC profile - Each Vertical sectio	1.50
21366	Section (SN) PVC profile - Each Horizontal sect	1.50

21369	Section (SN) PVC profile - max. 36ins	1.00
21372	Section (SN) PVC profile -max 36ins - Ea.add'l	0.25
21375	Replace (RP) FRP profile - Complete frame	4.50
21379	Section (SN) FRP profile - Each Vertical sectio	3.50
21383	Section (SN) FRP profile - Each Horizontal sect	2.50
21387	Section (SN) FRP profile - First 6 ins	1.00
21391	Section (SN) FRP profile - Ea.add'l 6 ins	0.50
21395	Repair (ZZ) (Long, strong Gelcoat) - First 6 ins	1.00
21398	Repair (ZZ) (Long, strong Gelcoat) - ea. add'l 6 ins	0.50
21401	Replace (RP) - PVC or similar - Each	2.00
21404	Replace (RP) - Aluminum - Each	2.00
21407	Replace (RP) - St. Steel - Each	3.00
21420	Replace (RP) single hinge assembly - Each.	2.00
21423	Straighten (GS) single hinge assembly - Each	1.00
21425	Free up (FR) Hinge assembly - Up to 4 Hinges per d	0.75
21427	Replace (RP) Hinge Pin only - Each	0.50
21430	Replace (RP) Hinge blade (Pin lug) - Each	0.75
21433	Remove and Refit (RR) Hinge blade (Pin lug) - Each	0.75
21436	Replace (RP) Complete door locking bar assembly - Each	2.00
21442	Section (SN) Locking bar rod(tube) assembly - First 12 ins	0.75
21445	Section (SN) Locking bar rod(tube) assembly - ea. add'l 6 ins	0.50
21448	Straighten (GS) Locking bar rod(tube) assembly - Each	0.50
21450	Free up (FR) Locking bar rod(tube) assembly - Single Lock rod	0.25
21452	Free up (FR) Locking bar rod(tube) assembly - 4 Lock rods	1.00
21454	Straighten (GS) Locking rod cam - Each	0.50
21456	Remove and refit (RR) Locking rod cam - Each	1.00
21459	Replace (RP) Locking rod cam - Each	1.00
21462	Straighten (GS) Locking rod Cam keeper - Each	0.25
21464	Remove and refit (RR) Locking rod Cam keeper - Each	0.75
21472	Replace (RP) Locking rod anti-rack device - Each	1.00
21473	Str. & resecure (RS) Locking rod bracket - lar - Each	0.20
21476	Resecure (RE) Locking rod bracket - large - Each	0.20
21478	Remove & refit (RR) Locking rod bracket - larg - Each	0.50
21481	Replace (RP) Locking rod bracket - large - Each	0.50
21484	Resecure (RE) Locking bar guide small - Each	0.20
21486	Straighten & resecure (RS) Locking bar guide sm - Each	0.20
21489	Remove and refit (RR) Locking bar guide small - Each	0.20
21492	Replace (RP) Locking bar guide small - Each	0.20
21495	Straighten (GS) Locking bar handle - Each	0.20
21497	Straighten & resecure (RS) Locking bar handle - Each	0.75
21500	Replace (RP) Locking bar handle - Each	0.50
21503	Free up (FR) Locking bar handle - Each	0.20
21506	Free up (FR) Locking bar handle - Set of 4	0.75

21509	Straighten (GS) Lock bar handle hub - Each	0.20
21511	Replace (RP) Lock bar handle hub - Each	0.50
21514	Remove and Refit (RR) Lock bar handle hub - Each	0.50
21526	Straighten (GS) Retainer only - Each	0.20
21528	Replace (RP)Retainer only - Each	0.20
21531	Straighten (GS) Door handle catch only - Each	0.20
21533	Replace (RP) Door handle catch only - Each	0.20
21542	Section (SN) Gasket Inner - First 12 ins	0.50
21546	Section (SN) Gasket Inner - Ea. add'l 6 ins	0.25
21550	Section (SN) Gasket Inner - Ver. and Horz. segm. - First	0.50
21554	Section (SN) Gasket Inner - Ver. and Horz. segm. - Each addi.	0.25
21558	Resecure (RE) Gasket Inner - Up to one full door(slot in or open track	0.50
21560	Replace (RP) Gasket Inner - Complete Gasket(slot in or open track type	1.00
21567	Section (SN) Gasket Inner - First 12 ins	0.50
21572	Section (SN) Gasket Inner - Ea. add'l 6 ins	0.25
21582	Section (SN) Gasket Inner - Each 8 ft Vert. segm	1.50
21587	Resecure (RE) Gasket Inner - Up to one full door	1.00
21590	Replace (RP) Gasket Inner - Complete Gasket	3.00
21594	Glue repair (ZZ) Gasket Inner - Up to two (2) repair	0.75
21597	Section (SN) Door Gasket - Up to 4 ft	1.00
21601	Section (SN) Door Gasket - 4 ft up to 7.5 ft	0.25
21605	Replace (RP) Complete Gasket assembly - Each door	3.00
21611	Str. and resecure (RS) Door Gasket Retaining St - 12 ins Up to 39 ins	0.25
21614	Str. and resecure (RS) Door Gasket Retaining St - Each Horizontal	0.75
21617	Str. and resecure (RS) Door Gasket Retaining St - Each Vertical	0.75
21620	Replace (RP) - Each 12 ins	0.50
21624	Replace (RP) - Horizontal strip com	0.75
21628	Replace (RP) - Vertical strip compl	1.00
21632	Replace (RP) - Door Complete Assy.w/hardware	3.50
21640	Straighten and resecure (RS) - per 12 ins	0.25
21643	Straighten and resecure (RS) - Each horizontal stri	0.50
21646	Straighten and resecure (RS) - Each vertical strip	0.75
21649	Replace (RP) - 12 ins Up to 39 ins	0.50
21661	Replace (RP) - Complete (stainless	2.00
21665	Replace (RP) - Complete (Aluminum)	2.00
21669	Replace (RP) 'T' Floor assembly complete - 20 ft	40.00
21672	Replace (RP) 'T' Floor assembly complete - 40 ft	75.00
21675	Insert (IT) 'T' Floor plate - Up to 225 sq.cm	2.00
21678	Insert (IT) 'T' Floor plate - Over 225 sq.cm - Fir	3.00
21681	Straighten (GS) 'T' profile only - First 12 ins	0.25
21683	Straighten (GS) 'T' profile only - ea. add'l 6 ins	0.10
21688	Insert (IT) 'T' profile only - First 6 ins	0.50
21692	Insert (IT) 'T' profile only - ea.add'l 6 ins	0.20

21696	Section (SN) T-Floor end stabilizer angle - First 12 ins	1.75
21700	Section (SN) T-Floor end stabilizer angle - ea. add'l 6 ins	0.50
21717	Replace (RP) T-Floor end stabilizer angle - 96 ins	3.00
21737	Replace (RP) T-floor drain - Complete Drain tube Assy.	1.75
21741	Replace (RP) T-floor drain - Up to two (2)	0.25
21745	Replace (RP) Drain plug and chain - Each	0.25
21749	Str. (GS) Air Flow Baffles or Front Baffle Plat - Over all length	0.25
21751	Replace (RP) 2 small hinge type baffle - (Alum)	0.75
21755	Replace (RP) Large piano hinge type baffle - (Alum)	1.50
21770	Steam clean (SC) Entire container (Interior) - 40 ft	1.00
21803	Replace (RP) - (Cargo Label plate) - One only	0.25
21807	Replace (RP) - (Consolidated Data plate) - One only	0.20
21811	Replace (RP) - (CSC plate) - One only	0.20
21815	Replace (RP) - (Manufacturer's data plate) - One only	0.25
21822	Replace (RP) - (TIR plate) - One only	0.20
21826	Replace (RP) - (Full set of Logos and decal mar - One only	2.50
21829	Replace (RP) - (Owner's logos) - Set of 2 side, and 1	0.75
21832	Replace (RP) - (Owner's side panel logo) - Each	0.40
21835	Replace (RP) - (Owner's door logo - H) - One only	0.40
21839	Replace (RP) - (Cargo limit decal) - Each	0.20
21842	Replace (RP) - (Weight marking) - Complete two part se	0.50
21845	Replace (RP) - (Weight marking) - Single decal (half s	0.25
21848	Replace (RP) - (set of 8 fleet numbers) - First set	0.20
21851	Replace (RP) - (set of 8 fleet numbers) - Each add'l	0.25
21854	Replace (RP) - (Owners prefix decal) - One	0.20
21858	Replace (RP) - (Full set of prefix and numbers) - One	0.25
21862	Replace (RP) - (Full set of prefix and numbers) - 5 full sets	1.00
21866	Replace (RP) - (Country code decal) - Each	0.20
21870	Replace (RP) - (Size and type decal) - Each	0.25
21874	Replace (RP) - (UIC decal) - Each	0.20
21884	Re-caulk (SR) - Entire exterior caulking - Per 10 ft	0.10
21887	Re-caulk (SR) - Entire interior caulking - Per 10 ft	0.10
22586	PTI FOR 40' CNT'R PER UNIT	1.00
22612	VESSEL ATTENDING	0.50
22872	REMOVE ATMOSPHERIC CONTROLLER	0.50
22875	SERVICE POWER RECEPTACLE	0.25
23101	Insert (IT) Rear corner post Assembly - First 12 ins	2.50
23102	Insert (IT) Rear corner post Assembly - ea. add'l 6 ins	1.00
23103	Weld (WD) Rear corner post Assembly - First 6 ins	0.50
23104	Weld (WD) Rear corner post Assembly - ea. add'l 6 ins	0.25
23105	Replace (RP) Front wing plate - Each	1.00
23106	Straighten (GS)Front wing plate - Each	0.50
23107	Replace (RP) Rear wing plate - Each	1.00

23108	Straighten (GS) Rear wing plate - Each	0.50
23109	Replace (RP) Crossmembers - Aluminum - First(excludes T-clip)	1.00
23110	Replace (RP) Crossmembers - Aluminum - ea. Add'l(excludes T-clip)	0.75
23111	Replace (RP) Crossmembers - Aluminum - First(includes T-clip)	1.25
23112	Replace (RP) Crossmembers - Aluminum - ea. add'l(includes T-clip)	1.00
23113	Straighten (GS) Crossmembers - Aluminum	0.50
23115	Over lapping partial section (OP) Outriggers - - First	2.50
23116	Over lapping partial section (OP) Outriggers - - ea.add'l	2.00
23117	Insert (IT) Outriggers - Steel - First 6 ins	0.75
23118	Insert (IT) Outriggers - Steel - ea.add'l 6 ins	0.50
23119	Straighten & Weld (GW) Outriggers - Steel - First 6 ins	0.50
23120	Straighten & Weld (GW) Outriggers - Steel - ea. add'l 6 ins	0.25
23121	Weld (WD) Outriggers - Steel - First 6 ins	0.50
23122	Weld (WD) Outriggers - Steel - ea. add'l 6 ins	0.25
23123	Straighten (GS) Crossmember Upper flange - First	0.50
23124	Straighten (GS) Crossmember Upper flange - ea. add'l	0.25
23125	Straighten (GS) Outrigger Upper flange - First	0.25
23126	Straighten (GS) Outrigger Upper flange - ea. add'l	0.25
23127	Section (SN) retainer door gasket - First 12 ins	0.50
23128	Section (SN) retainer door gasket - Ea. add'l 6 ins	0.25
23129	Replace (RP) retainer door gasket - Each 4 ft Horz. segm	1.50
23130	Replace (RP) retainer door gasket - Each 8 ft Vert. segm	2.00
23131	Section (SN) Gasket Inner - Each 4 ft Horz. segm	1.00
23132	Replace (RP) Rail cone dmg. protector recess - Each	2.50
23134	Replace (RP) double hinge assembly - Each.	2.50
23135	Straighten (GS) double hinge assembly - Each	1.25
23136	Replace (RP) Locking bar rod(tube) assembly - Each	2.00
23137	Replace (RP) Door handle lock assembly - Each complete set	0.50
23138	Remove and refit (RR) Door handle lock assy - Each complete set	0.50
23139	Str. and resecure (RS) Door handle lock assy - Each complete set	0.50
23140	Free up (FR) Door handle lock assembly - Single unit	0.25
23141	Free up (FR) Door handle lock assembly - Set of 4	0.75
23142	Replace (RP) TIR stop/slam(security) plate - Each	0.20
23143	Straighten (GS) TIR stop/slam(security) plate - Each	0.50
23145	Straighten (GS) Fork lift pocket lower flange - First	0.50
23146	Straighten (GS) Fork lift pocket lower flange - ea. add'l	0.25
23147	Straighten (GS) Forklift pocket upper flange - First	0.50
23148	Straighten (GS) Forklift pocket upper flange - ea. add'l	0.25
23149	Insert (IT) Forklift pocket side - First 6 ins	0.75
23150	Insert (IT) Forklift pocket side - ea.add'l 6 ins	0.50
23151	Straighten & Weld (GW) Forklift pocket side - First 6 ins	0.50
23152	Straighten & Weld (GW) Forklift pocket side - ea. add'l 6 ins	0.25
23153	Weld (WD) Forklift pocket side - First 6 ins	0.50

23154	Weld (WD) Forklift pocket side - ea. add'l 6 ins	0.25
23155	Replace (RP) Forklift pocket side - First	1.50
23156	Replace (RP) Forklift pocket side - ea. add'l	1.50
23157	Over lapping partial section (OP) Forklift pock - First	2.50
23158	Over lapping partial section (OP) Forklift pock - ea.add'l	2.00
23159	Straighten (GS) Forklift pocket side (Full prof - First	0.75
23160	Straighten (GS) Forklift pocket side (Full prof - ea. add'l	0.75
23161	Section(SN) Side bottom rails assy - Aluminum - First 39 ins	6.75
23162	Section(SN) Side bottom rails assy - Aluminum - ea. Add'l 12 ins	0.50
23163	Section (SN) Side bottom rails assy - Aluminum - ea. Addi'l 12 ins	1.00
23164	Section (SN) Side bottom rails assy - Aluminum - 39 ins	5.75
23165	Section (SN) Side bottom rails assy - Aluminum - ea. Add'l 12 ins	0.50
23166	Section (SN) Side bottom rails assy - Steel - First 12 ins	2.25
23168	Insert (IT) Side bottom rails assembly - Alumin - first 30?	1.00
23169	Insert (IT) Side bottom rails assembly - Alumin - ea. Add'l 15?	0.25
23170	Splice (SI) Side bottom rails assy w/ doubler p - First 12 ins	1.75
23171	Splice (SI) Side bottom rails assy w/ doubler p - ea. add'l 6 ins	0.25
23172	Section(SN) Side top rails assy -Aluminum -w/2 splice plates- First 39	7.50
23173	Section(SN) Side top rails assy -Aluminum -w/2 splice plates ea. add'l	0.50
23174	Section(SN) Side top rails assy - Aluminum -w/1 splice plate First 39	5.50
23175	Section(SN) Side top rails assy - Aluminum -w/1 splice plate ea. add'l	0.50
23176	Section (SN) Side top rails assy - Steel - First 12 ins	2.25
23177	Section (SN) Side top rails assy - Steel - ea. add'l 6 ins	0.50
23180	Insert (IT) Side top rails assembly - Aluminum - First 12 ins	1.00
23181	Insert (IT) Side top rails assembly - Aluminum - ea. add'l 6 ins	0.25
23182	Insert (IT) Side top rails assy - Steel - First 12 ins	2.00
23183	Insert (IT) Side top rails assy - Steel - ea. add'l 6 ins	0.50
23184	Straighten (GS) Rear bottom rail(Sill) assy - First 6 ins	0.25
23185	Straighten (GS) Rear bottom rail(Sill) assy - ea. add'l 6 ins	0.25
23186	Str. & Weld (GW) Rear bottom rail(Sill) assy - First 6 ins	0.75
23187	Str. & Weld (GW) Rear bottom rail(Sill) assy - ea. add'l 6 ins	0.50
23188	Weld (WD) Rear bottom rail(Sill) assy - First 6 ins	0.50
23189	Weld (WD) Rear bottom rail(Sill) assy - ea. add'l 6 ins	0.25
23190	Insert (IT) Rear top rail(Header) assy - First 6 in	1.00
23191	Insert (IT) Rear top rail(Header) assy - ea. add'l 6 ins	0.50
23192	Section (SN) Rear top rail(Header) assy - ea. add'l 6 ins	1.00
23193	Straighten (GS) Rear top rail(Header) assy - First 6 ins	0.50
23194	Straighten (GS) Rear top rail(Header) assy - ea. add'l 6 ins	0.25
23195	Str. & Weld (GW) Rear top rail assy - First 6 ins	0.50
23196	Str. & Weld (GW) Rear top rail assy - ea. add'l 6 ins	0.50
23197	Weld (WD) Rear top rail(Header) assy - First 6 ins	0.25
23198	Weld (WD) Rear top rail(Header) assy - ea. add'l 6 ins	0.25
23200	Replace (RP) Side bottom rail Gusset (Alum) - First	1.50

23201	Replace (RP) Side bottom rail Gusset (Alum) - Ea. add'l	1.00
23202	Replace (RP) cable retainer ass'y - Each	0.25
23203	Straighten (GS) Rear bottom rail lower flange - First 6 ins	0.25
23204	Straighten (GS) Rear bottom rail lower flange - ea. add'l 6 ins	0.25
23213	Replace (RP) Front top rail whole section - Full Length	12.00
23214	Replace (RP) Rear top rail whole section - Full length	16.00
23215	Patch (PT)	0.50
23216	Section (SN) tunnel recess plate - Up to 225 sq. cm	2.00
23217	Section (SN) tunnel recess plate - over 225 sq. cm	3.00
23218	Section (SN) tunnel recess plate	0.50
23219	Replace (RP) front vertical cover - Each	1.25
23220	Remove & reinstall (RR) front vertical cover - Each	1.25
23221	Replace (RP) front horizontal cover - Only one	1.00
23222	Remove & reinstall (RR) front horizontal cover - Only one	1.00
23223	Remove & reinstall (RR) - PVC or similar - Each	2.00
23224	Remove & reinstall (RR) - Aluminum - Each	2.00
23225	Remove & reinstall (RR) - St. Steel - Each	3.00
23229	Replace (RP) side baffle plate - Each	0.75
23230	Straighten (GS) side baffle plate - Each	1.00
23231	Replace (RP) vertical baffle plate - Each	1.75
23232	Straighten (GS) vertical baffle plate - Each	2.00
23233	Replace (RP) unit retainer - Each	0.50
23234	Remove & reinstall (RR) unit retainer - Each	0.50
23235	Replace (RP) front top lining ass'y - Only one	2.00
23236	Straighten (GS) front top lining ass'y - Only one	0.75
23237	Remove & reinstall (RR) front top lining ass'y - Only one	2.00
23238	Replace (RP) suction cover top grille - Only one	1.00
23239	Straighten (GS) suction cover top grille - Only one	1.75
23240	Replace (RP) alum. Cover protector - Only one	0.50
23241	Straighten (GS) alum. Cover protector - Only one	1.00
23242	Replace (RP) suction cover support angle - Each	0.25
23243	Straighten (GS) suction cover support angle - Each	0.50
23244	Replace (RP) alum. Cover protector quick bolts - Each	0.25
23245	Replace (RP) rear top angle ass'y - Only one	2.00
23246	Straighten (GS) rear top angle ass'y - Only one	0.75
23247	Remove & reinstall (RR) rear top angle ass'y - Only one	2.00
23248	Replace (RP) door bumper - Each	0.25
23249	Replace (RP) floor stringer - Each	1.00
23250	Section (SN) floor stringer - first 12ins	0.75
23251	Section (SN) floor stringer - ea. add'l 6ins	0.50
23252	Section (SN) base close-out - first 12ins	0.50
23253	Section (SN) base close-out - ea. add'l 6ins	0.25
23254	Replace (RP) - AL'M blind rivet - First. 20 pcs	0.75

23255	Replace (RP) - AL'M blind rivet - Each Add'l. 15 pcs	0.50
23256	Replace (RP) - SU'S blind rivet - First. 20 pcs	0.50
23257	Replace (RP) - SU'S blind rivet - Each Add'l. 15 pcs	0.50
23258	Replace (RP) - AL'M solid rivet - First. 20 pcs	0.75
23259	Replace (RP) - AL'M solid rivet - Each Add'l. 15 pcs	0.50
23260	Replace (RP) - SU'S solid rivet - First. 20 pcs	1.00
23261	Replace (RP) - SU'S solid rivet - Each Add'l. 15 pcs	0.50
23262	Replace (RP) - TLR rivet - First. 20 pcs	0.50
23263	Replace (RP) - TLR rivet - Each Add'l. 15 pcs	0.50
23264	Replace (RP) - Lock bolt = SUS' bolt- First. 20 pcs	1.00
23265	Replace (RP) - Lock bolt = SUS' bolt- Each Add'l. 15 pcs	0.50
23266	Argon welding - First 6ins	1.50
23267	Argon welding - Adtn'l 6ins	0.60
23268	Arc welding with rod - First 6ins	1.00
23269	Arc welding with rod - Adtn'l 6ins	0.20
23270	Realign (RA) - external dimension - Only one	4.00
23271	Remove rust & paint (AB) Entire container - First. 5000 sq.cm	0.25
23272	Remove rust & paint (AB) Entire container - Each Add'l 5000 sq.c	0.20
23278	Chemical clean (CC) Entire container (Exterior) - Over 40 ft	2.00
23280	Water wash (WW) Entire container (Exterior) - 40 ft	1.00
23285	Sweeping (WP) Entire container - Each.	0.50
23286	Remove & reinstall (RR) - Door ass'y - Each.	3.50
23287	Straighten and resecure (RS) - (Consolidated Da - Each	0.25
23288	Resecure (RE) - (Consolidated Data plate) - Each	0.25
23289	Remove & refit (RR) - (Consolidated Data plate) - Each	0.20
23290	Replace (RP) - First character deca	0.20
23291	Replace (RP) - Each add'l single c	0.25
23292	Replace (RP) - (C.A. decal) - Each (max. of 2 deca	0.20
23293	Replace (RP) - (Caution high trailer decal) - Each (max. of 3 deca	0.20
23294	Replace (RP) - (Height decal) - Each (max. of 2 deca	0.20
23295	Replace (RP) - (Mirror decal) - Each (max. of 2 deca	0.40
23296	Replace (RP) - (Class survey marking) - One only	0.20
23298	Replace (RP) - (Caution stripe decal) - Each	0.20
23299	Straighten and resecure (RS) - (CSC plate) - Each	0.25
23300	Resecure (RE) - (CSC plate) - Each	0.25
23301	Remove & refit (RR) - (CSC plate) - Each	0.20
23302	Str. and resecure (RS) - (TIR plate) - Each	0.25
23303	Resecure (RE) - (TIR plate) - Each	0.25
23304	Remove & refit (RR) - (TIR plate) - Each	0.20
23305	Replace (RP) - (Cargo Label decal) - One only	0.20
23306	Str. and resecure (RS) - (Cargo Label plate) - Each	0.25
23307	Resecure (RE) - (Cargo Label plate) - Each	0.25
23308	Remove & refit (RR) - (Cargo Label plate) - Each	0.25

23309	Str. and resecure (RS) - (Manufacturer's data p - Each	0.25
23310	Resecure (RE) - (Manufacturer's data plate) - Each	0.25
23311	Remove & refit (RR) - (Manufacturer's data plat - Each	0.25
23312	Remove and/or paint(MV) - (Customer marking) - Each 3 markings	0.20
23313	Replace (RP) - (Owner's front logo - H) - One only	0.20
23314	Replace (RP) tectrol port only - Each	0.20
23315	Replace (RP) tectrol track - Each	0.75
23316	Remove & reinstall (RR) tectrol track - Each	0.75
23317	Replace (RP) tectrol recess spacer - One only	1.00
23318	Remove & reinstall (RR) tectrol recess spacer - One only	1.00
23319	Replace (RP) tectrol port ass'y - Each	1.00
23320	Remove & reinstall (RR) tectrol port ass'y - Each	1.00
23321	Replace (RP) T-Floor Protector - Each	2.00
23322	Section (SN) T-Floor Protector - First 6 ins	1.50
23323	Section (SN) T-Floor Protector - Each add'l 6 ins	0.50
23324	Weld (WD) T-Floor Protector - Each cumulative 6 in	0.50
23325	Replace (RP) T-floor drain(Kazoos) - Each	0.25
23326	Replace (RP) T-floor drain - Each	0.25
23327	Resecure (RE) T-floor drain - Up to two (2)	0.25
23328	Insert (IT) 'T' Floor plate	1.00
23329	Replace (RP) rear sill gutter ass'y - One only	2.00
23330	Straighten (GS) rear sill gutter ass'y - One only	2.00
23331	Replace (RP) pan front ass'y - One only	1.50
23332	Straighten (GS) pan front ass'y - One only	1.75
23333	Resecure (RE) 'T' Floor Gutter or Flashing Side - First 12 ins	0.25
23334	Resecure (RE) 'T' Floor Gutter or Flashing Side - ea. add'l 12 ins	0.25
23335	Section (SN) 'T' Floor Gutter or Flashing Side - First 12 ins	1.00
23336	Section (SN) 'T' Floor Gutter or Flashing Side - ea. add'l 12 ins	0.25
23337	Str. & Resecure (RS) 'T' Floor Gutter or Flashi - First 12 ins	0.50
23338	Str. & Resecure (RS) 'T' Floor Gutter or Flashi - ea.add'l 12 ins	0.25
23339	Str. & weld (GW) 'T' Floor Gutter or Flashing S - Each cumulative 6 in	0.50
23340	Replace (RP) Baffle plate hinges - Each	0.25
23341	Replace (RP) quick bolt - Each	0.25
23342	Replace (RP) 3 small hinge type baffle - (Alum)	1.00
23343	Weld (WD) T-Floor end stabilizer angle - Each cumulative 6 in	0.50
23344	Weld (WD) 'T' profile only - Each cumulative 6 in	0.35
23351	Patch (PT) by rivet - Up to 225 sq.cm	1.00
23352	Patch (PT) by rivet - Over 225 sq.cm	2.00
23353	Patch (PT) by rivet	0.30
23354	Patch (PT) by weld side and door, inner panel- Up to 225 sq.cm	1.50
23355	Patch (PT) by weld side and door, inner panel- Over 225 sq.cm	3.00
23356	Patch (PT) by weld side and door, inner panel- ea. Add'l 900 sq.cm	1.00
23357	Patch (PT) by weld side and door, inner panel- Up to 225 sq.cm - M.G.S	1.50

23358	Patch (PT) by weld side and door, inner panel- Over 225 sq.cm-M.G.S	3.00
23359	Patch (PT) by weld side and door, inner panel- ea. Add'l 900 sq.cm-M.G	0.75
23360	Straighten(GS) Side and Roof and Door inner panel- First 900 sq.cm	0.50
23361	Straighten(GS) Side and Roof and Door inner panel- ea. Add'l 900 sq.cm	0.15
23362	Straighten(GS) - First 900 sq.cm	1.50
23363	Straighten(GS) - ea. Add'l 900 sq.cm	0.30
23366	Replace (RP) door retainer horizontal lower - Each	0.50
23367	Str. (GS) door retainer horizontal lower - Each	0.75
23369	Replace (RP) Panel inner cladding - Each	2.00
23370	Straighten (GS) Panel inner cladding - Each	0.75
23372	Remove & reinstall (RR) Panel inner cladding - - Each	2.00
23374	Patch (PT) by rivet - Up to 225 sq.cm	0.75
23375	Patch (PT) by rivet	0.25
23376	Patch (PT) by rivet - over 225 sq.cm	1.25
23377	Patch (PT) by rivet	0.20
23378	Patch (PT) by rivet - over 225 sq.cm	2.00
23379	Patch (PT) by rivet	0.30
23380	Patch (PT) by rivet - over 225 sq.cm	2.00
23381	Patch (PT) by rivet	0.30
23382	Patch (PT) by rivet - over 225 sq.cm	2.00
23383	Patch (PT) by rivet	0.30
23384	Patch (PT) by rivet - over 225 sq.cm	2.00
23385	Patch (PT) by rivet	0.30
23386	Patch (PT) by weld - Up to 225 sq.cm	2.00
23388	Patch (PT) by weld	1.00
23390	Patch (PT) by weld - over 225 sq.cm	4.00
23394	Patch (PT) by weld	0.75
23398	Straighten(GS) - first 900 sq.cm	0.50
23399	Straighten(GS) - ea. Add'l 900 sq.cm	0.15
23400	Straighten(GS) - first 900 sq.cm	1.00
23401	Straighten(GS) - ea. Add'l 900 sq.cm	0.25
23402	Straighten(GS) - first 900 sq.cm	1.50
23403	Straighten(GS) - ea. Add'l 900 sq.cm	0.30
23404	Straighten(GS) - first 900 sq.cm	2.00
23405	Straighten(GS) - ea. Add'l 900 sq.cm	0.30
23406	Straighten(GS) - first 900 sq.cm	1.50
23407	Straighten(GS) - ea. Add'l 900 sq.cm	0.30
23408	Straighten(GS) - first 900 sq.cm	2.00
23409	Straighten(GS) - ea. Add'l 900 sq.cm	0.30
23410	replace (RP) Panel-Internal stiffener - first side post	1.00
23411	replace (RP) Panel-Internal stiffener - ea. Add'l	0.75
23412	Replace (RP) Panel-joint capping - 20 ft	3.00
23413	Replace (RP) Panel-joint capping - 40 ft	6.00

23414	Section (SN) Panel-joint capping - First. 30 cms	1.00
23415	Section (SN) Panel-joint capping - Each Add'l 30 cms	0.25
23416	Straighten (GS) Panel-joint capping - First. 30 cms	0.25
23417	Straighten (GS) Panel-joint capping - Each Add'l 30 cms	0.25
23418	remove & reinstal (RR) Panel-joint capping - First. 30 cms	0.50
23419	remove & reinstal (RR) Panel-joint capping - Each Add'l 30 cms	0.10
23420	Replace (RP) Panel-joint profile - 20 ft	4.00
23421	Replace (RP) Panel-joint profile - 40 ft	8.00
23422	Section (SN) Panel-joint profile - First. 30 cms	0.50
23423	Section (SN) Panel-joint profile - Each Add'l 30 cms	0.20
23424	Straighten (GS) Panel-joint profile - First. 30 cms	0.25
23425	Straighten (GS) Panel-joint profile - Each Add'l 30 cms	0.25
23426	Remove & reinstall (RR) Panel-joint profile - First. 30 cms	1.50
23427	Remove & reinstall (RR) Panel-joint profile - Each Add'l 30 cms	0.25
23428	Replace (RP) by weld Side panel - 20 ft	70.00
23436	Replace (RP) by rivet Roof outer panel - 20 ft	28.00
23437	Replace (RP) by rivet Roof outer panel - 40 ft	48.00
23438	Replace (RP) by weld Roof outer panel - 20 ft	70.00
23442	Section (SN) Door plymetal panel - First. 144 sq. ins	1.50
23443	Section (SN) Door plymetal panel - ea. Add'l 36 sq. ins	0.30
23444	Patch (PT) by weld Side panel - 4 ft x 8 ft	22.10
23445	Patch (PT) by weld Side panel - 4 ft x 4 ft	16.90
23446	Patch (PT) by weld Side panel - 4 ft x 8 ft	2.00
23447	Patch (PT) by weld Side panel - 4 ft x 4 ft	3.00
23448	Patch (PT) Roof outer panel - 4 ft x 8 ft	6.00
23449	Patch (PT) Roof outer panel - 4 ft x 4 ft	3.50
23450	Patch (PT) by rivet Roof outer panel - 4 ft x 8 ft	7.00
23451	Patch (PT) by rivet Roof outer panel - 4 ft x 4 ft	4.50
23459	Patch (PT) by weld Roof outer panel - 4 ft x 8 ft	28.00
23461	Patch (PT) by rivet - Up to 225 sq.cm	0.75
23462	Patch (PT) by rivet - Over 225 sq.cm F	1.50
23463	Patch (PT) by rivet	0.25
23464	Patch (PT) by rivet - Up to 225 sq.cm	1.00
23465	Patch (PT) by rivet - Over 225 sq.cm F	2.00
23466	Patch (PT) by rivet	0.30
23467	Patch (PT) by rivet - Up to 225 sq.cm	1.00
23468	Patch (PT) by rivet - Over 225 sq.cm F	2.00
23469	Patch (PT) by rivet	0.30
23476	Straighten(GS) - First 900 sq.cm	1.00
23477	Straighten(GS) - Each Add'l 900 sq.c	0.25
23478	Straighten(GS) - First 900 sq.cm	1.50
23479	Straighten(GS) - Each Add'l 900 sq.c	0.30
23480	Straighten(GS) - First 900 sq.cm	1.50

23481	Straighten(GS) - Each Add'l 900 sq.c	0.30
23482	Replace (RP) gen-set mounting bracket - Each	2.00
23483	Straighten (GS) gen-set mounting bracket - Each	1.00
23484	Replace (RP) box nut for reefer machine & gen-s - Each	0.50
23485	Remove & reinstall (RR) reefer unit - Only one	9.00
23489	Chemical clean (CC) Entire container (Interior) - 20 ft	1.00
23490	Chemical clean (CC) Entire container (Interior) - 40 ft	1.50
23491	Chemical clean (CC) Entire container (Interior) - Over 40 ft	1.50
23494	Water wash (WW) Entire container (Interior) - Over 40 ft	0.75
23500	COMPRESSOR	3.25
23501	GASKET, COMP' SERVICE VALVE	0.20
23502	VALVE, SUCTION SHUT-OFF	1.00
23504	VALVE, DISCHARGE SHUT-OFF	1.00
23506	CAP, SEAL FOR VALVE	0.20
23507	CAP, SERVICE PORT (DIS')	0.20
23508	CAP, SERVICE PORT (SUC')	0.20
23509	SWITCH, HIGH PRESSURE	0.75
23513	SNUBBER ASS'Y	0.20
23514	BEARING HEAD & OIL PUMP PKG	1.00
23515	BEARING HEAD & OIL PUMP PKG (VANE)	1.00
23517	OIL, COMPRESSOR (1l) (R-134A)	0.15
23518	COUPLING M13 (LOW SIDE)	0.50
23519	COUPLING M15 (HIGH SIDE)	0.50
23520	PACKAGE, VALVE PLATE ASS'Y	1.00
23522	BOX ASS'Y, JUNCTION - BACK	0.50
23523	BOX ASS'Y, JUNCTION - FRONT	0.50
23524	COVER, JUNCTION BOX	0.20
23526	COIL, CONDENSER (4 ROW)	4.00
23527	MOTOR, CONDENSER FAN	1.25
23528	MOTOR, CONDENSER FAN (54-00586-20)	1.25
23529	REBUILD CONDENSER MOTOR	1.25
23530	COVER, CONDENSER COIL (4 ROW)	0.75
23531	COVER, CONDENSER COIL (3 ROW)	0.75
23532	BRACKET, COND' MOTOR MOUNT	0.75
23533	FAN, CONDENSER (16.00 DIA. - SST)	1.00
23534	FAN, CONDENSER (17-1/2 DIA. Plastic)	0.50
23535	FAN, CONDENSER (COMPOSITE)	1.00
23536	COIL, EVAPORATOR (489-80, 511-11)	6.00
23537	COIL, EVAPORATOR (511-44 & on)	6.00
23538	COIL, EVAPORATOR	4.50
23540	HEATER, EVAP. COIL - Each Additional	0.25
23541	HEATER, EVAP. COIL	1.00
23542	HEATER, DRAIN PAN	1.00

23543	THERMOSTAT (HTT)	0.75
23544	THERMOSTAT, HIGH TEMP' (HTT)	1.00
23545	MOTOR, EVAP' (ONE-SPEED)	1.25
23546	MOTOR, EVAP' FAN (TWO-SPEED)	1.25
23547	MOTOR, EVAPORATOR FAN (54-00585-00)	1.00
23548	REBUILT, EVAP' OR COND' MOTOR BEARING HOUSING	2.00
23549	REBUILT, ONE SPEED EVAP MOTOR	2.00
23550	REBUILT, TWO SPEED EVAP MOTOR	1.25
23551	STATOR, EVAPORATOR	2.00
23552	REPLACE, EVAP' MOTOR BEARING (FRONT + REAR)	2.00
23553	BRACKET, EM MOUNT	0.50
23554	BRACKET, EVAP' MOUNTING	0.50
23555	BRACKET-EVAP	0.50
23556	MOUNTING BRACKET, EVAP. FAN ASS'Y	0.50
23557	FAN, EVAPORATOR	0.75
23560	SWITCH, TOGGLE (MDS)	1.00
23562	440V POWER PLUG	0.50
23563	R & R 440V POWER PLUG	0.50
23564	440V POWER CABLE	0.75
23565	CIRCUIT BREAKER (12AMP) (ON-OFF)	1.00
23566	SWITCH, TOGGLE (ON-OFF)	0.50
23568	SWITCH VOLTAGE	1.50
23570	HANDLE,VSS (14 STATION)	0.50
23571	KNOB (14 STATION)	0.50
23572	KNOB (3 STATION)	0.50
23573	CIRCUIT BREAKER (CB-1)	1.00
23575	BOOT, CIRCUIT BREAKER KIT	0.50
23576	CIRCUIT BREAKER (CB-2)	1.00
23579	CIRCUIT BREAKER KIT	1.00
23580	TRANSFORMER, DUAL VOLT MODULAR	5.00
23581	TRANSFORMER, DUAL VOLT, EVAP'	3.00
23582	TRANSFORMER, DUAL VOLTAGE MODULAR	5.00
23584	DISUS'S COVER, RECEPTACLE, MENNEKES - 30AMP	0.50
23585	CAPACITOR, EVAP' MOTOR (HIGH 15)	0.50
23586	CAPACITOR, EVAP' MOTOR (LOW 5)	0.50
23587	CAPACITOR, EVAP' MOTOR (HIGH 15 LOCAL MADE)	0.50
23588	CAPACITOR, EVAP' MOTOR (LOW 15 LOCAL MADE)	0.50
23589	CAPACITOR, EVAP' MOTOR (LOW) (5?)	0.50
23590	CAPACITOR, EVAPORATOR MOTOR (20?)	0.50
23591	CAPACITOR, COND' MOTOR (20?)	0.50
23592	CAPACITOR, COND' MOTOR	0.50
23593	CONTACTOR, 40AMP	0.75
23594	CONTACTOR, 30AMP	0.75

23595	CONTACTOR, COMPRESSOR (30A)	1.00
23596	CONTACTOR, 15AMP (EF)	1.00
23597	CONTACTOR, 12AMP (EF)	0.75
23598	CONTACTOR, 15AMP (ES)	1.00
23599	CONTACTOR, 15AMP (CF)	1.00
23600	CONTACTOR, 12AMP (CF)	1.00
23601	CONTACTOR, 15AMP (HR)	1.00
23602	CONTACTOR, 12AMP (HR)	1.00
23603	CONTACTOR, AUXILIARY	0.75
23604	KIT, COMP' TERMINAL WIRING (SINGLE)	1.00
23605	KIT, COMP' TERMINAL WIRING (LOCAL MADE)	1.00
23606	TERMINAL BLOCK 5, COMPRESSOR	1.50
23607	TERMINAL BLOCK 6, COMPRESSOR	2.00
23608	220V/440V POWER CABLE SPLICE KIT	0.75
23609	REWIRING, ELECTRIC WIRE CUTTING	0.20
23614	TRANSFORMER, POTENTIAL	1.50
23615	TRANSFORMER, CURRENT LIMITING (CLT)	1.00
23616	CONTROLLER MODULE	1.00
23617	CONTROLLER TEST	6.00
23618	CONTROLLER BOX, MICRO	1.00
23621	MODULE, CONTROLLER/DATACORDER	1.00
23622	REBUILT, CONTROLLER MODULE (ML2 OR 2i)	1.00
23623	CONTROLLER MODULE (ML3)	1.00
23624	RECORDING THERMOMETER	2.50
23625	RECORDING THERMOMETER (SAGINOMIA)	2.50
23626	CLOCK, 31DAY, CCW (PARTLOW)	1.00
23627	REBUILT, CLOCK 31DAY, CCW (PARTLOW)	1.00
23628	CALIBRATION, TEMPERATURE THERMOMETER	2.00
23629	MACHANISM ASS'Y	2.00
23630	MAIN LEVER & PUSH ROD ASS'Y	1.00
23631	MECHANISM & PLATEN ASS'Y	1.00
23632	PLATEN, CHART	0.50
23633	STAND, MOUNTING, CHART DRIVE	1.00
23634	BATTERY KIT, REAL TIME CLOCK	0.75
23635	TIMER, 31DAY	1.00
23636	REBUILT, TIMER 31DAY	1.00
23637	PLATE, RECORDER (SAGINOMIA)	0.50
23638	KIT, STYLUS	0.50
23639	STYLUS, LIFT ARM (SAGINOMIYA)	0.50
23641	DATACORDER MODULE	1.00
23642	REBUILT, DATACORDER MODULE	1.00
23643	THERMOSTAT, SUCTION SOLENOID	1.00
23644	ELEMENT ASS'Y, SAGINOMIA	2.50

23646	ELEMENT, PARTLOW	2.50
23647	SENSOR, RETURN TEMP' (SAGINOMIA)	2.50
23648	SENSOR ASSEMBLY (STS&SRS&RTS)	1.00
23649	SENSOR, THERMISTOR (RTS)	1.00
23650	PROBE (STS)	1.00
23651	SENSOR (AMBS, CPSS, CSAS)	1.00
23652	SENSOR (STS, RTS, SRS, RRS)	0.75
23653	SENSOR, THERMISTOR (AMBS)	0.50
23654	SENSOR, THERMISTOR (CPDS)	0.75
23655	SENSOR ASSEMBLY (RRS)	1.00
23656	THERMOSTAT, DEFROST (DTT)	1.00
23657	SENSOR, THERMISTOR (DTS)	0.50
23658	SWITCH, ROTARY DEFROST INTERNAL	1.00
23659	RELAY, 12V DC	0.50
23660	BOARD, I/O - NEW	1.50
23661	BOARD, MAIN PRINTED CIRCUIT	2.00
23662	REBUILT, I/O BOARD	1.50
23663	REBUILT, MAIN PRINTED CIRCUIT BOARD	2.00
23664	BOARD, LOGIC - NEW	1.50
23666	REBUILT, LOGIC BOARD	1.50
23667	BOARD, POWER SUPPLY AND IRS	0.50
23668	REBUILT, POWER SUPPLY AND IRS BOARD	0.50
23669	REBUILT, TIMING CURRENT CONTROL BOARD	0.50
23670	REBUILT, HIGH VOLTAGE MODULE	0.75
23671	BOARD, TIMING & CURRENT CONTROL	0.50
23672	KIT, TRANSFORMER CURRENT	1.50
23673	MODULE, HIGH VOLTAGE	0.50
23674	TRANSFORMER, CURRENT SENSING (CS)	0.75
23675	BOARD, TEMP. CONTROL	0.50
23676	REBUILT, TEMP. CONTROL BOARD	0.50
23677	DISPLAY ASS'Y, DIGITAL	0.50
23678	DISPLAY, DIGITAL TEMP'	0.75
23680	REBUILT, DIGITAL TEMP' DISPLAY	0.75
23681	REBUILT, DIGITAL TEMP' LED DISPLAY	0.75
23682	REBUILT, DIGITAL TEMP' DISPLAY ASS'Y	0.50
23683	SWITCH, ASS'Y (TDS & TSS)	1.00
23684	SWITCH, TOGGLE (TSS)	1.00
23685	TRANSFORMER, BASE UNIT	1.00
23686	TRANSFORMER, CONTROL	1.00
23687	EACH FUSE	0.10
23688	inspec	0.50
23689	CAP & CHAIN, INTERROGATOR ML-2,2i	0.50
23690	CAP AND TETHER, RMU	0.50

23691	REPAIR, INTERROGATOR STRING	0.20
23692	TRANSDUCER, COND' PRESSURE (CPT)	1.00
23693	SWITCH, PUSH BUTTON (TDS)	1.00
23694	INDICATOR, VOLTAGE (SAGINOMIA)	1.00
23696	PAD, KEY	0.75
23698	SWITCH, SET TEMP' DISPLAY (SDS)	1.00
23699	TEMP. SELECTOR (?/?)	1.00
23700	REBUILT, KEY PAD (ML-2,2i)	1.00
23701	SWITCH, SCALE SELECTOR (SSS)	1.00
23702	BATTERY RECHARGER INSTALLATION FOR COMMISSIONING	2.00
23703	REPLACE, BATTERY RECHARGER	2.00
23704	RECEPTACLE, INTERROGATOR ML-1	1.00
23705	RECEPTACLE, INTERROGATOR ML-2,2i	1.00
23706	RECEPTACLE, REMOTE MONITORING	1.00
23707	VALVE, QUENCH FOR SOLENOID	3.00
23708	VALVE,QUENCH (EXPANSION)	1.75
23709	COIL, QUENCH VALVE	1.00
23710	SMV	2.00
23712	KIT, SMV TUBE & HOUSING	2.00
23713	VALVE, STEPPER MOTOR	1.50
23714	COIL, SMV	0.75
23715	POWER PACK, STEPPER MOTOR	1.00
23716	SSV (ALCO)	2.00
23717	SSV (SPORLAN)	3.00
23718	KIT, REPAIR FOR SSV (ALCO)	1.50
23719	KIT, REPAIR FOR SSV (SPORLAN)	2.00
23720	KIT, SSV DIAPHRAGM (ALCO)	2.00
23721	COIL, SSV (ALCO)	0.75
23722	COIL, SSV (SPORLAN)	1.00
23723	COVER, TXV	1.00
23724	FLANGE, BODY (TXV)	2.00
23725	KIT, REPAIR FOR TXV	2.00
23727	VALVE, HERMETIC TXV	2.00
23728	VALVE, PRESSURE REGULATOR	2.25
23729	EXCHANGER, HEAT	2.25
23730	VALVE, LIQUID LINE (511)	1.75
23731	VALVE, LIQUID LINE (489)	1.75
23732	INDICATOR, LIQUID MOISTURE	1.75
23733	INDICATOR, MOISTURE-LIQUID	1.00
23734	FILTER-DRIER	0.25
23735	PLUG, FUSIBLE	1.00
23736	VALVE, HIGH SIDE PRESSURE RELIEF	1.00
23738	VALVE, HP RELIEF	1.00

23739	VALVE, PRESSURE RELIEF (LOW SIDE)	1.00
23740	GAUGE, DISCHARGE PRESSURE	1.00
23741	GAUGE, SUCTION PRESSURE	1.00
23742	RECEIVER - PAINTED STEEL	1.50
23743	RECEIVER - SST	1.50
23744	RECEIVER, ELECTRO-COATED MODULAR	1.50
23745	GLASS, SIGHT, WITH RED BALL (489)	0.75
23746	GLASS, SIGHT, WITH RED BALL (511)	0.75
23750	BRACKET ASS'Y, GAUGE	1.00
23751	ELBOW, 90 STREET	0.50
23752	ELBOW, M13 X M13	0.50
23753	ELBOW, M15 X M15	0.50
23754	ELBOW, SWIVEL, 90 1/4FLARE X M15	0.50
23755	STIFFENER ASS'Y, GAUGE	0.50
23756	TEE, 1/4NPT	0.50
23757	TEE, MALE	0.50
23758	TUBE ASS'Y, HIGH PRESSURE	1.00
23759	TUBE ASS'Y, LOW PRESSURE	1.00
23760	VALVE ASS'Y, CORE, CHECK	0.50
23761	REPAIR REFRIG. LEAK	1.00
23762	INSPECT & REPORT DIAGNOSTIC TIME	0.75
23763	EVACUATION & PRESSURE TEST OF REFRIGERANT	0.75
23764	R&R REEFER UNIT	5.00
23766	PANEL, FRESH AIR MAKEUP	1.00
23767	PANEL, TRANSFRESH ACCESS	0.75
23768	PANEL, ACCESS	1.00
23769	GRILLE AND VENTURI ASS'Y (69NT43-228-1)	1.00
23770	GRILLE, CONDENSER	1.00
23773	VENTURI	1.50
23774	VENTURI FOR 17-1/2 DIA. FAN	1.00
23775	GRILLE AND VENTURI ASS'Y (79-66635-00)	1.00
23776	GUARD, COMPRESSOR	0.50
23778	GRILLE, TOP - 489	1.50
23779	GRILLE, TOP - 511	1.50
23780	DOOR ASS'Y, PROBE ACCESS	0.75
23781	DOOR, ACCESS (BACK PANEL) - 489	0.75
23782	DOOR, ACCESS (BACK PANEL) - 511	0.75
23783	PANEL, BOTTOM - 489	0.75
23784	PANEL, BOTTOM - 511	0.75
23785	PANEL, BOTTOM	1.00
23787	PANEL, UPPER - 489-80	0.75
23789	PANEL, UPPER - 511	0.75
23790	BASE, COMPRESSOR	1.00

23791	CAPSCREW, ACCESS COVER	0.10
23792	REPLACE, UNIT MOUNTING BOLT (2PC)	0.10
23793	RETIGHTEN, UNIT MOUNTING BOLT - ALL	0.10
23794	SCREW, MACHINE (BACK PANEL)	0.20
23795	SCREW, RETAINING	0.20
23797	SCREW, RETAINING FOR COND' GRILLE	0.20
23798	SCREW, RETAINING, WING	0.20
23800	STUD, (COND' GRILLE)	0.20
23801	STUD, 1/4 TURN, 0.97LG	0.20
23802	STUD, 1/4 TURN, 1.06LG	0.20
23803	REPLACE, UNIT GASKET	1.00
23804	COVER, FRESH AIR MAKEUP	0.50
23805	KIT, DISC AND STUD ASS'Y	0.50
23806	CONTROL DOOR ASS'Y	1.00
23810	DOOR ASS'Y (DISPLAY)	0.50
23812	HINGE, HALF FOR CONTROL DOOR	0.50
23813	WINDOW & GASKET, CONT' DOOR	0.50
23814	BOX ASS'Y (SAGINOMIYA)	1.50
23815	CASE, PARTLOW	1.50
23817	COVER ASS'Y, PARTLOW	1.50
23818	DOOR ASS'Y, SAGINOMIA	1.50
23819	GLASS, COVER (PARTLOW)	1.50
23820	WINDOW, SAGINOMIA	1.00
23821	HINGE ASS'Y, SAGINOMIA	0.50
23822	HINGE, BACK PANEL	0.50
23823	HINGE, GRILLE (511)	0.50
23824	HINGE, GRILLE (489)	1.00
23825	KEY, CLOCK WINDING (PARTLOW)	0.20
23826	FLANGE, CHART DRIVE (GLUCK)	0.50
23827	FLANGE, CHART DRIVE (SONCEBOZ)	0.50
23828	NUT & CHAIN, CHART (GLUCK)	0.50
23829	NUT & CHAIN, CHART (SONCEBOZ)	0.50
23830	NUT, CHART (SAGINOMIA)	0.50
23831	SHIELD, HIGH VOLT	0.50
23834	SHIELD, HIGH VOLT (PLASTIC) (489)	0.50
23835	SHIELD, HIGH VOLT (PLASTIC) (511)	0.50
23836	SHIELD, LOW VOLT (LEXAN) (489)	0.50
23837	SHIELD, LOW VOLT (LEXAN) (511)	0.50
23838	LABEL, CHARGE WITH R-134A	0.10
23839	LABEL, FRESH AIR	0.10
23840	LABEL, FUNCTION CODE	0.20
23841	LABEL, OPERATING INSTRUCTION	0.20
23842	LABEL, POE COMP' OIL	0.10

23843	LABEL, R-134A OZONE PROTECTION	0.10
23844	CLAMP, CABLE CUTTER	1.00
23845	LATCH & CATCH, PRODUCTION OF DOMESTIC	0.50
23846	LATCH, CABLE STORAGE COVER	0.20
23847	LATCH, CATCH	0.20
23848	POWER CABLE STORAGE RUBBER BAND	0.50
23849	FILM, PARTLOW (100 PCS)	5.00
23850	GUTTER, RAIN	2.00
23851	HANDLE, FIXED	0.50
23852	HANDLE, HINGED	0.50
23853	PANEL, BLANK	0.50
23854	PIN ASS'Y FOR CONTROL DOOR	0.50
23855	PROTECTION WASHER FOR RETAINING SCREW MISSING (100PCS)	5.00
23856	RECEPTACLE (COND' GRILLE)	0.50
23857	RECEPTACLE, RETAINING	0.20
23858	RECEPTACLE, RETAINING (SAGINOMIA)	0.20
23859	TRANS-WORK, VESSEL SPARE PART	2.00
23860	UNIT DISPOSAL	46.00
23861	STRAIGHTEN & ARGON WELDING FOR UNIT FRAME - FIRST 30C	2.50
23862	STRAIGHTEN & ARGON WELDING FOR UNIT FRAME -ADD'L 30CM	0.50
23863	HANDLING CA CONTROL KIT	1.50
23864	SENSOR, HUMIDITY	0.75
23865	INSPECT & REPORT DATA DOWNLOAD PER UNIT	0.75
23866	REPLACE RECEIVER TANK (PROJECT WORK)	3.50
23867	GAS CONVERSION (FM R-12 TO R-134A)	13.50
23868	GAS CONVERSION (FM R-12 TO R-22)	13.00
23869	GAS CONVERSION INCLUDING CPDS JOB (FM R-12 TO R-22)	13.50
23870	P.M SERVICE	13.00
23871	REPAIR, GAS LEAKAGE FROM CPDS TUBE	4.00
23907	RESET TEMPERATURE	0.25
23908	R & R OIL SIGHT GLASS	0.90
23909	BRAZE ANY JOINT HIGH SIDE	1.70
23910	BRAZE ANY JOINT LOW SIDE	1.20
23911	SOFTWARE RECONFIGURE	0.75
23912	RECALIBRATE PARTLOW	0.25
23913	R & R RETURN SENSOR WITH CA BOX	3.00
23914	R & R "KIIXON SWITCH"	1.20
23915	R & R AIR PRESSURE SWITCH	0.90
23916	R & R WATER PRESSURE SWITCH	0.90
23917	R & R HOURMETER	0.60
23918	REPAIR ANY WIRE	0.20
23919	REPAIR EACH ADDITIONAL WIRE	0.10
23920	R & R FUSE HOLDER	0.30

23921	R & R SUCTION GUAGE LINE	0.30
23922	R & R DISCHARGE LINE	0.30
23923	R & R CHART NUT	0.20
23924	TIGHTEN FRONT UNIT MOUNTING BOLTS	1.25
23926	CHARGE FREON	0.60
23933	Chemical clean (CC) Entire container (Exterior) - 20 ft	1.00
23934	Chemical clean (CC) Entire container (Exterior) - 40 ft	1.50
23950	Install Medfly Screen	0.25
23951	Plug Reefer to Shore Power	0.30
23952	Remove Extra Dunnage from the Container	0.25
23953	FLAME TEST REEFER - PASS	1.00
23954	FLAME TEST REEFER - FAIL	1.00
25001	DK - Replace Compressor, scroll (Inc. R & R)	2.00
25002	DK - Replace Switch, high pressure	0.50
25003	DK - Replace high pressure transducer (HPT)	0.50
25004	DK - Replace Low pressure transducer (LPT)	1.00
25005	DK - Replace Sensor, discharge pipe Temp' (DCHS)	0.50
25006	DK - Replace Sensor, Comp' suction pipe Temp'(SGS)	0.50
25007	DK-Replace Check valve (line type)	0.50
25008	DK - Replace Cap, service valve	0.50
25009	DK - Replace Service valve	0.50
25010	DK - Replace Discharge companion flange	0.50
25011	DK - Replace Flare nut	0.50
25012	DK - Replace Flange packing, Comp' discharge	0.20
25013	DK - Replace Flange packing, Comp' suction	0.20
25014	DK - Replace Front plate	1.00
25015	Carrier - Replace Coil, condenser (economy)	4.00
25016	Carrier - Replace Coil, condenser (3 row)	4.00
25017	Carrier - Replace Coil, condenser(local made)	4.00
25018	DK - Replace Coil, condenser	3.00
25019	DK - Replace Fan blade, condenser	0.25
25020	DK - Replace Liquid, receiver	1.50
25021	DK - Replace Motor, condenser fan	1.00
25022	DK - Replace evaporator Ass'y	6.00
25023	DK - Replace Fan, evaporator	0.50
25024	Replace Heater, Evap' coil (local made)	1.00
25025	Replace Each additional (local made)	0.25
25026	Replace Plug connector for Evap' motor	0.50
25027	Replace Receptacle, Evap' motor	0.30
25028	Replace Plug, Evap' motor	0.30
25029	DK - Replace Motor, Evap' - three phase	1.00
25030	DK - Replace Set plate, fan motor	2.00
25031	DK - Replace Fan guide Ass'y	2.00

25032	DK - Replace Reinforce plate, fan motor	0.50
25033	DK - Replace Earth leakage circuit breaker	0.50
25034	DK - Replace Magnetic contactor, CF	0.50
25035	DK - Replace Cable - compressor terminal wiring	1.00
25036	DK - Replace Magnetic contactor, compressor	0.50
25037	DK - Replace Magnetic contactor, EF	0.50
25038	DK - Replace Magnetic contactor, ES	0.50
25039	DK - Replace Magnrtic contactor (phase correction contactor)	0.50
25040	DK - Replace Reverse phase protector	0.50
25041	Replace Connector of controller	0.20
25042	Replace Connector, KA	0.20
25043	Replace Connector (16 POS')	0.20
25044	Replace Harness (keypad-display)	0.20
25045	Replace Harness, MA-MB	0.20
25046	DK - Rewire Any wire	0.50
25047	DK - Replace Terminal strip board	2.00
25048	DK - Replace Control panel (with sheet key)	1.00
25049	DK - Replace Packing	0.50
25050	DK - Replace Set plate - PT/CT board	1.00
25051	DK - Replace Mounting plate, electric components	1.00
25052	DK - Modifications Upgrade for configuration or operation software	0.75
25053	DK - Inspect and report Data download per unit	0.75
25054	Carrier - Inspect and report Controller test	6.00
25055	DK - Replace Controller Ass'y	1.00
25056	DK - Replace PCB Ass'y	1.00
25057	DK - Inspect and report Controller test	6.00
25058	Replace Battery pack for datacorder	0.15
25059	Replace Battery pack for datacorder (local made)	0.15
25060	DK - Replace Pin	0.50
25061	DK - Replace Contactor, receptacle	0.50
25062	Replace Battery Kit, real time clock (local made)	0.75
25063	DK - Replace PC port connector	0.75
25064	DK - Replace PC port fixing plate	0.75
25065	DK - Replace Sensor, humidity	0.75
25066	Replace Contact, pin #16	0.20
25067	DK - Replace Sensor (DRS)	0.75
25068	DK - Replace Sensor (DSS)	0.75
25069	DK - Replace Sensor (RS)	0.75
25070	DK - Replace Sensor (SS)	0.75
25071	DK - Replace Display board	0.75
25072	DK - Replace Operation display cover	0.75
25073	DK - Replace PT/CT board	0.25
25074	DK - Replace Low frequency transformer	0.75

25075	DK - Replace Filter-drier	0.25
25076	Inspect and report Repair Refrig' leak (all maker)	1.00
25077	DK - Replace Plug, fusible	0.25
25078	DK - Replace Gauge joint with check valve	0.50
25079	DK - Replace Exchanger, heat	1.50
25080	DK - Replace Thermal insulation tube	0.50
25081	Replace Plug, pipe,1/4-18 NPTF-brass	0.50
25082	DK - Replace Strainer	0.50
25083	DK - Replace Filter - 0299134	0.50
25084	DK - Replace Filter - 1505748	0.50
25085	Carrier - Replace Cap of valve, pressure regulator	0.50
25086	DK - Replace Valve, pressure regulator	1.50
25087	Replace Gas leakage from CPDS tube	4.00
25088	Remove CPDS tube	0.70
25091	DK - Replace Indicator, liquid moisture	0.75
25092	DK - Replace Electronic expansion valve coil	0.50
25093	DK - Replace Body, motrized valve	2.00
25094	DK - Replace Body, solenoid valve (RSV, DSV, HSV, BSV)	2.00
25095	DK - Replace Body, solenoid valve, LSV	3.00
25096	DK - Replace Coil, solenoid valve (LSV)	1.00
25097	Abrade and Paint entire SMV	0.50
25098	DK - Replace SMV	2.00
25099	Replace Housing, coil	0.50
25100	Replace Piston and Motor Ass'y	0.50
25101	DK - Replace Body ,SMV	1.50
25102	DK - Replace Cover Band, SMV	0.10
25103	DK - Replace Clamp, SMV	0.50
25104	DK - Replace Upper cover, SMV	0.10
25105	Replace Power pack, stepper motor	1.00
25106	Replace Emergency module	0.50
25107	DK - Replace Coil, Smv	0.50
25108	DK - Replace PC board for SMV	1.00
25109	DK - Replace Body, solenoid valve - ESV, ISV	1.00
25110	DK - Replace Coil, solenoid Valve (RSV, DSV, HSV, BSV, ESV, ISV)	0.50
25111	DK - Replace Ventilation cover	1.00
25112	DK - Replace Sealing material (ventilator)	0.50
25113	DK - Replace Control box welding Ass'y	1.50
25114	DK - Replace Front plate control box	1.00
25115	DK - Replace Holding plate, front panel	1.00
25116	DK - Replace Control box cover Ass'y	1.00
25117	DK - Replace Control box cover welding Ass'y	1.00
25118	DK - Replace Rubber gasket	0.50
25119	DK - Replace Roller, quick lock lever	0.75

25120	DK - Replace Lever	0.75
25121	DK - Replace Fixing plate for lever	0.75
25122	Replace Window for control door	0.35
25123	Conversion DiSUS'e cover, partlow type	0.75
25124	Conversion DiSUS'e cover, saginomia type	0.75
25125	Abrade and Paint DiSUS'e to glass with paint saginomia type	0.15
25126	DK - Replace Hinge (recorder/box)	0.50
25127	DK - Replace Fan guide stay Ass'y	1.00
25128	DK - Replace Fan guide	1.00
25129	Carrier - Replace Unit drain tube (Incl' Cond' fan RandR)	1.00
25130	Air clean drain hose	0.75
25131	DK - Replace Drain hose	0.50
25132	DK - Replace Rear plate (lower)	0.50
25133	DK - Replace blind plate	0.50
25134	DK - Replace Instruction card (emergency and service)	0.50
25135	DK - Replace Rear plate (upper)	0.50
25136	DK - Remove and refit Reefer unit	5.00
25137	DK - Replace Unit gasket	0.20
25138	DK - Replace Discharge grill	1.00
25139	Replace Panel, heater access	0.75
25140	DK - Replace Wire clamp	1.00
25141	DK - Replace Clamp - 1136539	0.50
25142	DK - Replace Clamp - 1267712	0.50
25143	DK - Replace Hose band	0.20
25144	DK - Replace Casing frame, evaporator - 1266391	1.00
25145	DK - Replace Casing frame, evaporator - 1266409	1.00
25146	DK - Replace Fan guide fixing plate	1.00
25147	DK - Replace Cover	0.50
25148	DK - Replace Center stay	0.75
25149	DK - Replace Side stay - 1266360	0.75
25150	DK - Replace Side stay - 1266377	0.75
25151	DK - Replace Rear stay	0.75
25152	DK - Replace Shield plate	0.50
25153	DK - Replace Name plate, operation	0.10
25154	Carrier - Replace Label, C/A controller	0.10
25155	Carrier - Replace Label, unit model number (3 pcs)	0.10
25156	DK - Replace Name plate, refrigerant	0.10
25157	Carrier - Replace Label, fresh air (local made)	0.10
25158	Remove Markings frame decal	0.06
25159	DK - Replace Name plate, ventilator	0.10
25160	DK - Replace Name plate, ventilator arrow	0.10
25161	DK - Replace Cable holding sheet metal	1.00
25162	Abrade and Paint access panel	0.50

25163	DK - Replace Panel, access (without cushion and sealing Material)	1.00
25164	Replace Panel gasket	0.20
25165	DK - Replace Cushion material (access panel)	1.00
25166	DK - Replace Sealing material (access panel)	1.00
25167	DK - Replace Speed bolt - 860011(1pc), 1267611(3pcs), wing bolt (2	0.20
25168	DK - Replace Universal nut	0.20
25169	DK - Replace Pan head machine screw, washer	0.20
25170	DK - Replace Quick fastener, patch plate nut	0.20
25171	DK - Replace Seal washer	0.20
25172	DK - Resecure Unit mounting bolt (1 pc)	0.10
25173	DK - Replace Sensor, ambient air Temp' (AMBS)	0.50
25174	Carroer - Replace Sensor, combination	0.75
25175	DK - Replace Sensor (EIS)	1.00
25176	DK - Replace Sensor (EOS)	1.00
25177	Carrier - Replace Water tank level gauge	0.50
25178	Carrier - Replace Water drain cock, 1/4 NPT	0.50
25179	Carrier - Replace Water tank aap Ass'y	0.50
25181	Replace 440V Plug (loca Made)	0.50
25184	Replace Nut, Coil	0.10
25185	Replace Self Locking Nut	0.10
JOB NO	REEFER MECHANICAL JOB DESCRIPTION	Time/Hours*
22005	Replace Compressor scroll 2.5 hrs	2.50
22011	Daikin - Replace high pressure transducer (HPT)	0.50
22013	Thermo King - Replace Transducer-discharge	1.00
22014	Daikin - Replace Low pressure transducer (LPT)	1.00
22015	Thermo King - Replace Low pressure switch	0.50
22016	Thermo King - Replace Transducer-suction	1.00
22024	Daikin - Replace Sensor discharge pipe Temp' (DCHS)	0.50
22026	Daikin - Replace Sensor Comp' suction pipe Temp' (SGS)	0.50
22028	Thermo King - Replace Cover-terminal box	0.20
22030	Daikin-Replace Check valve (line type)	0.50
22035	Daikin - Replace Service valve	0.50
22036	Daikin - Replace Discharge companion flange	0.50
22037	Daikin - Replace Flare nut	0.50
22038	Thermo King - Replace Valve (Dis')	1.00
22040	Daikin - Replace Flange packing Comp' discharge	0.20
22041	Daikin - Replace Flange packing Comp' suction	0.20
22042	Thermo King - Replace Gasket Comp' service valve(discharge)	0.20
22043	Thermo King - Replace O-ring Comp' service valve(suction)	0.20
22048	Thermo King - Replace Fitting-low side	0.50
22049	Thermo King - Replace Fitting-high side	0.50
22050	Thermo King - Replace Adapter-high side	0.50
22052	Thermo King - Replace Valve (Suc')	1.00

22055	Daikin - Replace Front plate	1.00
22074	Daikin - Replace Motor condenser fan	1.00
22075	Thermo King - Replace Condenser fan motor	1.25
22081	Daikin - Replace evaporator Ass'y	6.00
22082	Thermo King - Replace Coilevaporator	8.00
22083	Replace Sensor thermistor (DTS)	0.50
22084	Thermo King - Replace Thermostat defrost termination	1.00
22085	Thermo King - Replace Evaporator fan	1.00
22087	Carrier - Replace Fan evaporator	0.75
22088	Daikin - Replace Fan evaporator	0.50
22099	Thermo King - Replace Evaporator fan motor	1.50
22100	Replace Plug connector for Evap' motor	0.50
22101	Replace Receptacle Evap' motor	0.30
22102	Replace Plug Evap' motor	0.30
22104	Daikin - Replace Motor Evap' - three phase	1.00
22111	Daikin - Replace Set plate fan motor	2.00
22112	Daikin - Replace Fan guide Ass'y	2.00
22113	Daikin - Replace Reinforce plate fan motor	0.50
22115	Thermo King - Replace Housing evaporator	2.00
22123	Daikin - Replace Earth leakage circuit breaker	0.50
22124	Thermo King - Replace Circuit breaker (25amp)	1.00
22125	Daikin - Replace Magnetic contactor	0.50
22128	Daikin - Replace Cable - compressor terminal wiring	1.00
22129	Thermo King - Replace kit power cord	1.00
22133	Thermo King - Replace Contactor 25amp ?	0.80
22144	Daikin - Replace Reverse phase protector	0.50
22147	Thermo King - Replace Boot-switch	0.20
22149	Thermo King - Replace Control transformer	1.50
22150	Replace Connector	0.20
22153	Replace Harness (keypad-display)	0.20
22154	Replace Harness MA-MB	0.20
22157	Thermo King - Replace Connector(pin) 7 25	0.20
22158	Thermo King - Replace Cable-connecting(no.2)	0.20
22160	Thermo King - Replace Connector-plug(2pinshort circuit)	0.20
22161	Thermo King - Replace Block-terminal(8 pole) (14 Pole) (18 pole)	0.20
22164	Thermo King - Replace Terminal-stop clip	0.20
22165	Thermo King - Replace Plate-end terminal	0.20
22166	Thermo King - Replace Block-terminal	0.20
22167	Thermo King - Replace Connector-cross	0.20
22168	Daikin - Replace Terminal strip board	2.00
22169	Thermo King - Replace Main relay board	0.50
22172	Daikin - Replace Control panel (with sheet key)	1.00
22173	Daikin - Replace Packing	0.50

22175	Daikin - Replace Set plate - PT/CT board	1.00
22176	Daikin - Replace Mounting plate electric components	1.00
22180	Replace Controller/Datacorder core charge	0.00
22193	Daikin - Replace PCB Ass'y	1.00
22196	Thermo King - Replace Battery(12v1.9 ah)	0.15
22199	Daikin - Replace Pin	0.50
22200	Daikin - Replace Contactor receptacle	0.50
22202	Replace Battery Kit real time clock (local made)	0.75
22203	Thermo King - Replace Battery(real time clock)	0.75
22204	Daikin - Replace PC port connector	0.75
22205	Daikin - Replace PC port fixing plate	0.75
22206	Thermo King - Replace Fuse holder	0.30
22214	Replace Contact pin #16	0.20
22217	Thermo King - Replace Power relay	0.50
22218	Daikin - Replace Sensor (DRS)	0.75
22219	Daikin - Replace Sensor (DSS)	0.75
22221	Daikin - Replace Sensor (RS)	0.75
22222	Daikin - Replace Sensor (SS)	0.75
22227	Daikin - Replace Display board	0.75
22228	Daikin - Replace Operation display cover	0.75
22229	Thermo King - Replace Control display	0.75
22232	Daikin - Replace PT/CT board	0.25
22233	Daikin - Replace Low frequency transformer	0.75
22236	Thermo King - Replace Dehydrator	0.50
22242	Daikin - Replace Gauge joint with check valve	0.50
22244	Daikin - Replace Exchanger heat	1.50
22245	Thermo King - Replace Economizer heat exchanger	2.25
22246	Daikin - Replace Thermal insulation tube	0.50
22256	Daikin - Replace Strainer	0.50
22259	Thermo King - Replace Tube-disc. service valve to cond coil	1.00
22260	Thermo King - Replace Tube-receiver to dehydrator	1.00
22261	Thermo King - Replace Tube-liquid injection	1.00
22264	Daikin - Replace Valve pressure regulator	1.50
22265	Remove CPDS tube	0.70
22278	Daikin - Replace Electronic expansion valve coil	0.50
22279	Thermo King - Replace Expansion valve	2.00
22280	Daikin - Replace Body motrized valve	2.00
22281	Daikin - Replace Body solenoid valve (RSV DSV HSV BSV)	2.00
22284	Thermo King - Replace Vapor injection valve	2.30
22285	Thermo King - Replace Coil for liquid inject valve	0.50
22286	Daikin - Replace Body solenoid valve LSV	3.00
22287	Daikin - Replace Coil solenoid valve (LSV)	1.00
22288	Abrade and Paint entire SMV	0.50

22291	Daikin - Replace SMV	2.00
22292	Thermo King - Replace Digital control valve	2.30
22296	Replace Piston and Motor Ass'y	0.50
22297	Daikin - Replace Body SMV	1.50
22298	Daikin - Replace Cover Band SMV	0.10
22299	Daikin - Replace Clamp SMV	0.50
22300	Daikin - Replace Upper cover SMV	0.10
22304	Daikin - Replace Coil Smv	0.50
22305	Daikin - Replace PC board for SMV	1.00
22307	Daikin - Replace Body solenoid valve - ESV ISV	1.00
22308	Thermo King - Replace Economizer txv valve	2.10
22309	Daikin - Replace Coil solenoid Valve (RSV DSV HSV BSV ESV ISV)	0.50
22314	Daikin - Replace Ventilation cover	1.00
22315	Daikin - Replace Sealing material (ventilator)	0.50
22316	Thermo King - Replace Air vent-complete	1.00
22317	Daikin - Replace Control box welding Ass'y	1.50
22318	Daikin - Replace Front plate control box	1.00
22319	Daikin - Replace Holding plate front panel	1.00
22321	Daikin - Replace Control box cover Ass'y	1.00
22322	Daikin - Replace Control box cover welding Ass'y	1.00
22323	Thermo King - Replace Control box door	1.00
22324	Daikin - Replace Rubber gasket	0.50
22326	Thermo King - Replace Hinge control door	0.50
22327	Daikin - Replace Roller quick lock lever	0.75
22328	Daikin - Replace Lever	0.75
22329	Daikin - Replace Fixing plate for lever	0.75
22331	Replace Window for control door	0.35
22332	Abrade and Paint DiSUS'e to glass with paint saginomia type	0.15
22333	Conversion DiSUS'e cover partlow type	0.75
22334	Conversion DiSUS'e cover saginomia type	0.75
22335	Daikin - Replace Hinge (recorder/box)	0.50
22338	Daikin - Replace Fan guide stay Ass'y	1.00
22339	Daikin - Replace Fan guide	1.00
22342	Daikin - Replace Drain hose	0.50
22343	Thermo King - Replace Drain hose (29mm)	1.00
22344	Thermo King - Replace Drain hose (21mm)	1.00
22345	Thermo King - Replace Tee-drain hose	1.00
22346	Daikin - Replace Rear plate (lower)	0.50
22351	Daikin - Replace blind plate	0.50
22352	Daikin - Replace Instruction card (emergency and service)	0.50
22358	Thermo King - Replace Plate rear (bottom)	1.00
22362	Daikin - Replace Rear plate (upper)	0.50
22363	Thermo King - Replace Plate-rear (top)	1.00

22366	Daikin - Remove and refit Reefer unit	5.00
22368	Daikin - Replace Unit gasket	0.20
22374	Daikin - Replace Discharge grill	1.00
22375	Thermo King - Replace Grill-condenser	1.00
22376	Thermo King - Replace Gasket-cond. grill	0.50
22377	Replace Panel heater access	0.75
22378	Daikin - Replace Wire clamp	1.00
22379	Daikin - Replace Clamp - 1136539	0.50
22380	Daikin - Replace Clamp - 1267712	0.50
22381	Daikin - Replace Hose band	0.20
22382	Thermo King - Replace Bracket-power cable	1.00
22384	Resecure front unit mounting bolt 1pc	0.10
22385	Replace Capscrew access cover and screw machine (back pane	0.10
22387	Replace Screw retaining (wing and Cond' grille)	0.20
22388	Replace Screw retaining (wing and Cond' grille - local mad	0.20
22389	Replace Stud 1/4 turn 0'97 LG and Cond' grille and recepta	0.20
22390	Replace Stud 1/4 turn 1'06 LG	0.10
22391	Replace Nut self locking for EF motor and nut wing ventila	0.10
22393	Replace Speed bolt - 860011 (1 pc) 1267611 (3 pcs) wing bol	0.20
22394	Replace Universal nut	0.20
22396	Replace Quick fastener patch plate nut	0.20
22397	Replace Seal washer	0.20
22399	Daikin - Replace Casing frame evaporator - 1266409	1.00
22400	Daikin - Replace Fan guide fixing plate	1.00
22401	Daikin - Replace Cover	0.50
22402	Daikin - Replace Center stay	0.75
22403	Daikin - Replace Side stay - 1266360	0.75
22404	Daikin - Replace Side stay - 1266377	0.75
22405	Daikin - Replace Rear stay	0.75
22406	Daikin - Replace Shield plate	0.50
22407	Carrier - Replace Label function code	0.20
22408	Carrier - Replace Label operating instruction	0.20
22409	Daikin - Replace Name plate operation	0.10
22410	Carrier - Replace Label C/A controller	0.10
22411	Carrier - Replace Label unit model number (3 pcs)	0.10
22412	Daikin - Replace Name plate refrigerant	0.10
22413	Replace Label charge with R-134A	0.10
22414	Replace Label R-134A ozone protection	0.10
22415	Replace Label POE comp' oil	0.10
22416	Remove Markings frame decal	0.06
22417	Carrier - Replace Label fresh air	0.10
22418	Carrier - Replace Label fresh air (local made)	0.10
22419	Daikin - Replace Name plate ventilator	0.10

22420	Daikin - Replace Name plate ventilator arrow	0.10
22421	Thermo King - Replace Nameplate-r404a	0.20
22422	Thermo King - Replace Nameplate-air vent door	0.20
22425	Daikin - Replace Cable holding sheet metal	1.00
22426	Thermo King - Replace Plate-guard compressor	0.50
22427	Thermo King - Replace Plate-cable storage	0.50
22428	Thermo King - Replace Cover	0.50
22429	Abrade and Paint access panel	0.50
22432	Daikin - Replace Panel access (without cushion and sealing Material)	1.00
22433	Thermo King - Replace Door-evaporator(hinge door)	1.00
22435	Replace Panel gasket	0.20
22436	Daikin - Replace Cushion material (access panel)	1.00
22437	Daikin - Replace Sealing material (access panel)	1.00
22438	Thermo King - Replace Gasket-evaporator door	1.00
22442	Handling CA control kit	1.50
22443	Handling Vessel spare part	2.00
22445	Daikin - Replace Sensor ambient air Temp' (AMBS)	0.50
22448	Daikin - Replace Sensor (EIS)	1.00
22449	Daikin - Replace Sensor (EOS)	1.00
22450	Thermo King - Replace Sensor (return supply ambient condenser coil e	0.75
22451	Thermo King - Replace Compressor discharge gas sensor	0.75
22452	Carrier - Replace Water tank level gauge	0.50
22453	Carrier - Replace Water drain cock 1/4 NPT	0.50
22454	Carrier - Replace Water tank aap Ass'y	0.50
23558	Replace Fan evaporator EFM-1 Or EFM-2	0.75
23697	Replace Key pad	0.75
23711	Replace SMV	1.00
23765	Replace Panel access	0.75
25089	Recharge R-134A gas per 1 Kg (all maker)	0.60
25090	Recharge R-404A gas	0.60
25501	Star Cool-Replace Compressor	3.25
25502	Star Cool-Remove and refit Compressor	3.00
25503	Star Cool-Replace Discharge pressure transmitter 0~32 b	0.50
25504	Star Cool-Replace Suction pressure transmitter -1~12 ba	0.50
25505	Star Cool-Replace Frequency converter	1.00
25506	Star Cool-Remove and refit Frequency convert	1.00
25507	Star Cool-Replace Valve plates	1.00
25508	Star Cool-Replace Compressor sight glass	0.50
25509	Star Cool-Replace Compressor terminal block	1.00
25510	Star Cool-Replace Discharge service valve	0.50
25511	Star Cool-Replace Service vlave gasket(s) compressor st	0.20
25512	Star Cool-Replace Suction service valve	1.00
25513	Star Cool-Replace Condenser square	0.75

25514	Star Cool-Replace Condenser coil	4.00
25515	Star Cool-Replace Condenser Fan	0.75
25516	Star Cool-Replace Receiver Tank	2.00
25517	Star Cool-Replace Condenser fan motor include fan	1.25
25518	Star Cool-Replace Evap' coil	6.00
25519	Star Cool-Replace Evap' Fan	0.75
25520	Star Cool-Replace Drain pan heater	1.00
25521	Star Cool-Replace Evaporator coil heater	1.00
25522	Star Cool-Replace Each additional	0.25
25523	Star Cool-Replace Evap' fan motor incl.fan	1.00
25524	Star Cool-Replace Inlet ring evap	0.50
25525	Star Cool-Replace Main circuit breaker(CIM6)	0.75
25526	Star Cool-Replace Motor cable FC/Compressor	0.50
25527	Star Cool-Replace Contactor	0.75
25528	Star Cool-Replace on-off PCB	0.50
25529	Star Cool-Replace Controller PCB module	1.00
25530	Star Cool-Replace Power meas. PCB(CIM6)	0.75
25531	Star Cool-Replace Any control fuses 0.4A	0.10
25532	Star Cool-Replace Humidity sensor(CIM6)	0.75
25533	Star Cool-Replace Control Transformer(CIM6)	1.50
25534	Star Cool-Replace Filter - drier	0.25
25535	Star Cool-Replace Economizer heat exchanger	2.25
25536	Star Cool-Replace Schrader valve straight type	0.50
25537	Star Cool-Replace Expansion valveEvaporator	2.00
25538	Star Cool-Replace Liquid line valve	1.75
25539	Star Cool-Replace Hot gas solenoid valve	2.00
25540	Star Cool-Replace Any solenoid coil 10W 24VAC	1.00
25541	Star Cool-Replace Economizer service valve	2.00
25542	Star Cool-Replace Air exchange damper ass'y	1.00
25543	Star Cool-Replace Drain hose	1.00
25544	Star Cool-Replace Cover plate unit backside	0.75
25545	Star Cool-Replace Back plate evaporator	0.75
25546	Star Cool-Replace Fan grill evaporator	1.50
25547	Star Cool-Replace Fan grill condenser square module	0.50
25548	Star Cool-Remove and refit Back plate	0.75
25549	Star Cool-Replace Inspection cover complete	0.75
25550	Star Cool-Replace All sensor	0.75
25551	Star Cool-Replace Discharge pressure transmitter 0~30 b	0.50
25552	Star Cool-Replace Suction pressure transmitter -0.69~9.	0.50
25553	Star Cool-Replace Valve plates	1.00
25554	Star Cool-Replace Service vlave gasket(s) service valve	0.20
25556	Star Cool-Replace Motor bracket evaporator fan	0.50
25557	Star Cool-Replace Auxiliary Contactor	0.20

25558	Star Cool-Replace Display PCB User panel(CIM6)	0.50
25559	Star Cool-Replace Filter - drier (material charge only)	0.00
25560	Star Cool-Replace Schrader valve angle type	0.50
25561	Star Cool-Replace Expansion valveEconomizer	2.00
25562	Star Cool-Replace Hot gas solenoid valve service kit	2.00
25563	Star Cool-Replace Inspection cover complete	0.50
25564	Star Cool-Replace HP-Switch	0.75
JOB NO	GEN SET JOB DESCRIPTION	Time/Hours*
30001	R & R Any Switch	0.50
30006	R & R Hourmeter	0.50
30011	R & R Any Relay	0.50
30021	R & R Fuse Holder	0.25
30024	R & R Any Fuse	0.10
30029	R & R Electronic Battery Charger	0.75
30034	R & R Any (1) Valve	5.00
30039	R & R Each Additional Valve	0.25
30044	R & R Any (1) Valve and Guide	5.25
30049	R & R Each additional Valve & Guide	0.50
30054	R & R Any (1) Valve and Seat	5.25
30059	R & R Each additional Valve & Seat	0.50
30064	R & R Water Pump	3.00
30069	R & R Coolant Thermostat	1.00
30074	Mechanical Fuel Pump	1.00
30079	R & R Fuel Pump Screen	0.20
30083	R & R Hand Primer Pump	0.40
30088	R & R Integral Tank	1.50
30095	R & R Integral Tank Bracket	0.50
30100	R & R Radiator	2.00
30107	R & R Radiator Fan Blade	0.25
30112	R & R Pressure Test Cooling System	0.50
30114	R & R Pressure Test Radiator Cap	0.20
30116	R & R Water Pump	3.00
30121	R & R Upper Radiator Hose	0.40
30126	R & R Lower Radiator Hose	0.70
30131	R & R Air Vent Hose	0.70
30136	R & R Fill Neck Hose	0.40
30141	R & R Fuel Warmer Hose (Either)	0.40
30147	R & R Fuel Warmer Hose (Both)	0.60
30151	R & R All Coolant Hoses	1.20
30156	R & R All Coolant Hoses (Units with Fuel Warmer	1.40
30158	R & R Engine Mount Support Each	1.20
30161	R & R Any Coolant Hose Clamp	0.20
30166	R & R Collant Recovery Bottle	0.50

30171	R & R Water Temperature Gauge	0.50
30176	R & R Water Temperature Sensor	0.50
30181	R & R Water Temperature Switch	0.75
30186	Pre-Trip of Genset	0.60
30188	Move Genset to Yard Plug-in/Unplug & Return	1.00
30190	PM - Genset, Service & Change Fluid - 3000 Hrs	5.25
30192	Fuel Genset (Fuel Extra)	0.25
30194	Add Oil to Genset Unit	0.25
30196	Hook-up Genset to Reefer / Re-set Temp	0.25
30198	Mount/Remove Genset to/from Chassis	0.75
30200	Pre-Check for Release (Fuel and Start-up)	0.25
30202	Stencil Unit Number & Prefix	0.20
30204	Add Fuel Conditioner	0.30
30206	Add Fuel Prime/Start	0.80
30208	Check for Fuel Leak	0.60
30213	Check for Losing Prime	1.20
30216	Clean Transfer Pump Screen	0.30
30218	Prime and Start Unit	0.80
30220	R & R Bleed Screw Assy.	0.50
30225	R & R Delivery Valve &/or O-Ring (Each)	0.30
30230	R & R Fuel Filter Base (Incl. Filters & Hoses)	1.20
30252	R & R Fuel Tank Gauge Dial	0.30
30257	R & R Fuel Tank Vent / Drain Plug	0.30
30291	R & R Primer Pump	0.50
30296	R & R Sediment Bowl	0.60
30303	R & R Transfer Pump	0.90
30310	R & R Transfer Pump CHK Valves	0.70
30317	Rebuild Injector - each	0.60
30325	R & R Missing Fuel Cap	0.10
30327	Repair Fuel Line	0.60
30332	Thaw out Fuel System / Tank	0.60
30333	Drain & Refill Coolant	0.60
30337	Flush Cooling System	1.20
30359	R & R Expansion Tank (Incl. Drain & Fill)	0.80
30371	R & R Radiator Cap	0.30
30395	R & R Adjust Hose Clamp (ALL)	0.20
30397	Rebuild Water Pump (Not Incl. R & R)	1.20
30415	R & R / Adjust Exhaust Clamp (ALL)	0.30
30417	R & R Rain Cap / Expansion Pipe	0.20
30424	R & R Air Cleaner Indicator	0.30
30429	R & R Dry Air Cleaner	0.30
30446	R & R Oil Bath Air Cleaner & Service	0.60
30451	Adjust Valves (Incl. R & R Cover)	1.20

30456	Grind Valves Head Off	4.00
30459	Install Guides (Incl. Grinding)	5.20
30464	Install Seats & Reseats	1.20
30469	R & R Cross Plug on the Head	1.70
30474	R & R Head/GSKT - Adjust Valves	5.80
30479	R & R RCKR Arm/Rods All (Incl. Adj. Valves)	2.90
30499	Resurface CYL. Head.	1.20
30504	Change Oil & Filter	0.80
30507	Check For Oil Leak	0.60
30512	R & R Dipstick / Tube	0.30
30514	R & R Line to Guage	0.60
30519	R & R Oil Filter Base / O-ring	0.60
30521	R & R Oil Drain Hose	0.60
30528	R & R Oil Pressure Guage	0.60
30533	Bore Cyls. - Each	0.80
30538	Grind All Journals	2.40
30543	Grind Main Journals	2.00
30548	Grind Rod Journals	1.70
30553	Major Overhaul (On Bench)	25.30
30558	R & R Access for Short Block (On Floor)	11.50
30563	R & R Access for Engine (On Floor)	3.50
30568	R & R Cam Plug / Cover	0.60
30578	R & R Cam Shaft & Busing (On Bench)	7.50
30583	R & R Crankshaft (On Bench - W/O BRGS)	7.50
30588	R & R Crankshaft & BRGS (On Bench)	8.10
30594	Dial Indicate Flywheel HSG	1.20
30608	R & R Flywheel HSG & Dial Ind.	4.00
30615	R & R Flywheel Ringgear Flywheel Off	0.20
30622	R & R Front Main Oil Seal (On Floor)	1.20
30629	R & R Front Seal - New style	1.20
30636	R & R Front Seal - Old Style	2.30
30643	R & R Frost Plug-Block	1.70
30648	R & R Oil Pan (On Floor)	1.70
30658	R & R PSTNS Rings Rod BRGS (On Bench)	10.90
30663	R & R Rear Engine Main Seal	6.90
30670	R & R Rear Main Oil Seal (On Floor)	1.70
30677	R & R Rings / Deglaze (On Bench)	10.40
30682	R & R Rod & Main BRGS (On Bench)	5.80
30692	R & R Side Cover Gasket	1.20
30697	R & R Timing Gear Cover	2.30
30712	R & R Wear Ring / Speed Sleeve	0.30
30717	Resurface CYL. Block	1.20
30722	Adjust Engine RPM	0.60

30725	Adjust Timiing	0.60
30728	Check / Add Oil & Water	0.30
30753	R & R Glow Plug-All	1.20
30766	R & R Starter Solenoid (On Bench)	0.60
30773	Rebuild Starter (Not Incl. R & R)	1.70
30777	Check Charging System	0.60
30789	Check Battery / Load Test	0.30
30799	R & R Battery	0.60
30807	Repair Cables	0.60
30812	R & R Control Module (ALL)	1.20
30817	R & R Control Panel	0.60
30822	R & R Current Limit/Diode	0.60
30834	R & R Exciter Assy.	1.20
30839	R & R Fuel / Speed Solenoid	0.60
30856	R & R Water Level Sensor	1.20
30861	R & R IRMU & SRMU	1.20
30891	R & R Relayboard Assy.	0.80
30901	R & R Relay Socket	1.20
30906	R & R Safety Switch or Resistor	0.60
30911	R & R Start / Preheat Switch	0.80
30921	R & R Water Temp. Switch	0.60
30926	Adjust RPM Sensor	0.30
30941	R & R Cycle Sentry Circuit Board	1.20
30948	R & R Cycle Sentry Module	1.20
30951	R & R Flywheel RPM Sensor Adjust	0.60
30956	R & R A/C Alternator Bearing	1.70
30959	R & R Capacitor	0.60
30969	R & R A/C Motor Internal Parts (Bench)	1.20
30974	R & R AC Overload Protector	0.80
30984	R & R Transformer	1.70
30991	R & R A/C Power Plug / Receptacle	0.75
30998	Repair AC Cord	0.60
31003	Boost Unit to Start	0.30
31005	Check Amp. Draw On Sols.	0.60
31008	Clean Jones Plug	0.20
31012	R & R Frost Plug Heater	1.70
31015	R & R Jones Plug	1.20
31028	R & R Fan Drive Belt	0.60
31037	R & R Engine Front Drive Pulley	1.20
31044	R & R Idler Pul. Assy. (Incl. Adj. Belt)	0.60
31051	R & R Idler Pulley Overhaul Adj. Belts	1.20
31063	R & R engine Mounts / All (Rubber)	2.30
31068	R & R Rear engine Support	1.20

31073	R & R Micro Bezel	1.20
31075	Paint Door or Panel	1.20
31078	R & R Door Latch	0.30
31083	R & R Grille	0.60
31088	R & R Hinge Type Door	0.60
31093	Install New Unit & Check	1.70
31098	Install Used Unit & Check	1.70
31103	R & R Diesel Fuel Heater	1.20
31110	R & R Frame (Incl. R & R Unit)	11.50
31115	R & R Fuel Tank Bracket	2.30
31127	R & R Fuel Tank (No Fuel Trans.)	1.40
31137	Repair Pick Up Tube in Tank	1.40
31142	Steam Clean Unit	0.60
31150	Add Fuel Prime / Start	0.80
31152	Adjust Belts	0.60
31174	Check / Service Battery & Cables	0.25
31196	Run & Check Operation	0.60
31234	R & R Battery / incl. Cables	0.75
31244	R & R Low Oil Pressure Switch	0.40
31251	R & R Oil Pressure Sender	0.50
31256	R & R Oil Temperature Safety Switch	0.25
31266	R & R Ammeter	0.50
31271	R & R Voltmeter	0.50
31276	R & R Frequency Meter	0.50
31281	R & R Rectifier Assembly	1.25
31286	R & R Single Diode	1.50
31291	R & R Alternator	0.75
31298	R & R Voltage Regulator	1.25
31303	R & R Brushes	1.25
31306	R & R Main Circuit Breaker	0.75
31311	R & R Control Panel Harness	2.00
31316	R & R Engine Wiring Harness	2.50
31321	R & R Generator Wiring Harness	2.50
31326	R & R Generator	3.50
31336	R & R Genset from Container / Chassis	0.50
31343	R & R Bearing Assembly	1.00
31348	R & R Drive Disc	4.00
31358	R & R Terminal Strip	0.90
31363	Repair Any Wire	0.60
31370	Repair Each Additional Wire	0.10
31377	Repair or Replace Any Wire End	0.60
31384	Repair or Replace Each Additional Wire End	0.10
31391	R & R Engine (for 69GC120 add 2.00 hrs)	4.50

31398	R & R Complete Overhaul (for 69GC120 add 2.00 h	24.00
31403	Test Cylinder Compression	1.50
31405	R & R Valve Cover &/or Gasket	0.50
31408	R & R Cylinder Head &/or Gasket	4.50
31411	R & R Each Additional Head	0.90
31414	R & R Rocker Arm Assembly (Per Head)	1.50
31416	R & R Any (1) Valve Spring (Per Head)	1.75
31421	R & R Each Additional Spring (Per Head)	0.10
31426	R & R Any (1) Valve, Seat and Guide (Per Head)	5.50
31431	R & R Each additional Valve, Seat and Guide (Pe	0.50
31436	Adjust Valves	1.25
31441	R & R Any (1) Injector	0.50
31446	R & R Each additional Injector	0.20
31451	R & R Injector Nozzle & Adjust	0.70
31456	R & R Each additional Injector Nozzle & Adjust	0.40
31461	R & R Any (1) Injector Line	0.30
31463	R & R Each additional Injector Line	0.10
31465	R & R Mechanical Fuel Pump	1.00
31468	R & R Fuel Pump Screen	0.20
31473	R & R Hand Primer Pump	0.40
31478	R & R Injection Pump	1.20
31485	R & R Injection Pump Camshaft	3.00
31490	R & R Governor Assembly	3.00
31495	R & R Run Lever Assembly	0.50
31500	R & R Any (1) Glow Plug	0.50
31505	R & R Each Additional Plug	0.25
31510	R & R Exhaust Manifold	1.75
31515	R & R Intake Manifold	1.00
31520	R & R Any (1) Piston, rod, & Rings	11.00
31525	R & R Each additional Piston Assembly	0.30
31530	R & R Crankshaft, Pistons, & Brgs	16.00
31535	R & R Camshaft	6.10
31540	R & R Any (1) Lifter (Per Head)	4.20
31547	R & R Air Lifters (Per Head)	4.30
31554	R & R Timing Case Cover	2.00
31559	R & R Timing Gear	4.00
31564	R & R Front Pulley & Seal	4.00
31571	R & R Flywheel	6.00
31578	R & R Flywheel Housing	6.00
31585	R & R Rear Oil Seal & Wear Sleeve	7.00
31592	R & R Oil Pump	4.00
31597	R & R Oil Filter Tube	0.20
31602	R & R Oil Pan Drain Hose	0.40

31607	R & R Oil Filter Head	0.40
31614	R & R Oil Filter	0.10
31621	R & R Starter Motor	0.50
31628	R & R Starter Motor Drive Gear	0.80
31633	R & R Muffler / Exhaust Pipe	1.00
31638	R & R Any Flexible Hose (Air Intake)	0.50
31658	R & R Electric Fuel Pump	0.50
31665	R & R Fuel Line to Tank	0.50
31670	R & R Any Fuel Fitting	0.20
31675	R & R Any Fuel Hose	0.40
31680	R & R Any Fuel Hose Clamp	0.20
31685	R & R Fuel Filter Head	0.70
31690	R & R Fuel Filters (Each)	0.10
31695	R & R Fuel Warmer	0.70
31696	R & R Undermount Tank (30/50 Gal)	1.00
31703	R & R Undermount Tank Strap	0.50
31720	R & R Fuel Tank Gauge	0.40
31725	R & R Fuel Filler Cap	0.20
31730	R & R Fuel Solenoid / incl. Spring	0.75
31737	Bleed Fuel System	1.00
31742	R & R Flush Coolant System	1.20
31749	R & R Water Pump Belt	0.30
31756	R & R Engine Thermostat	1.00
31762	Resecure Genset Cover	0.15
31763	REMOVE/REINSTALL GENSET COVER	0.25
31764	RE-TORQUE SHOCK MOUNTS	0.50
31765	SERVICE AIR INTAKE SYSTEM	0.25
31766	DRILL OUT AND TAP BROKEN OR CROSS TREADED BOLT	0.50
31767	STRAIGHTEN BENT GENSET COVER	0.25
31783	R & R Power Receptacle	0.75
31788	R & R AC Alt. Diodes	2.30
31800	PM - Genset, Service & Change Fluid - 1000 Hrs	4.50
31801	PM - Genset, Service & Change Fluid - 400 Hrs	4.00
31900	Dismount Genset From	0.75
31901	Mount Genset To	0.75
31903	Strn & Align Access Door	0.25
31904	Resecure Fuel Filter Mounting Bracket	0.25
31905	Rethread Fuel Cap Nozzle	0.25
32000	UNLOAD GENSET FROM FLATBED	0.20
32001	LOAD GENSET ONTO FLATBED	0.20
32002	UNLOAD GENSET FROM CONTAINER	0.25
32003	LOAD GENSET INTO CONTAINER	0.25
33007	Mount/Remove Genset to/from Container	0.75

33008	Reconfigure Controller	0.25
JOB NO	DRY CONTAINER JOB DESCRIPTION	Time/Hours*
40001	Replace (RP) Roof Bows - First	1.00
40002	Replace (RP) Roof Bows - ea. add'l	1.00
40003	Straighten (GS) Roof Bows - First	0.50
40004	Straighten (GS) Roof Bows - ea. add'l	0.25
40005	Weld (WD) Roof Bows - First	0.25
40006	Weld (WD) Roof Bows - ea. add'l	0.25
40007	Replace (RP) Lashing Bar - Each	0.20
40008	Straighten (GS) Lashing Bar - Each	0.10
40009	Str. & weld (GW) Lashing Bar - Each	0.20
40010	Weld (WD) Lashing Bar - Each	0.15
40011	Replace (RP) Lashing Ring - Each	0.20
40012	Straighten (GS) Lashing Ring - Each	0.10
40013	Str. & weld (GW) Lashing Ring - Each	0.20
40014	Weld (WD) Lashing Ring - Each	0.15
40015	Straighten (GS) Corner Post Assy - First 12 ins	0.50
40016	Straighten (GS) Corner Post Assy - ea. add'l 6 ins	0.25
40017	Str. & weld (GW) Corner Post Assy - First 6 ins	0.20
40018	Str. & weld (GW) Corner Post Assy - ea. add'l 6 ins	0.15
40019	Weld (WD) Corner Post Assy - First 6 ins	0.15
40020	Weld (WD) Corner Post Assy - ea. add'l 6 ins	0.10
40021	Replace (RP) Corner Fitting - Each	2.30
40022	Insert (IT) Corner Post - "J" Bar - First 12 ins	0.60
40023	Insert (IT) Corner Post - "J" Bar - ea. add'l 6 ins	0.15
40024	Straighten (GS) Corner Post - "J" Bar - First 12 ins	0.25
40025	Straighten (GS) Corner Post - "J" Bar - ea. add'l 6 ins	0.20
40026	Str. & weld (GW) Corner Post - "J" Bar - First 6 ins	0.20
40027	Str. & weld (GW) Corner Post - "J" Bar - ea. add'l 6 ins	0.15
40028	Weld (WD) Corner Post - "J" Bar - First 6 ins	0.15
40029	Weld (WD) Corner Post - "J" Bar - ea. add'l 6 ins	0.10
40030	Replace (RP) Hinge Lug - Each	0.20
40031	Insert (IT) Front Corner Post Outer Piece - First 12 ins	1.50
40032	Insert (IT) Front Corner Post Outer Piece - ea. add'l 6 ins	0.50
40033	Insert (IT) Front Corner Post Single Piece - Each up to 9ft	6.00
40034	Insert (IT) Front Corner Post Single Piece - First 12 ins	2.25
40035	Insert (IT) Front Corner Post Single Piece - ea. add'l 6 ins	0.75
40036	Straighten (GS) Corner Post Single Piec - First 12 ins	0.50
40037	Straighten (GS) Corner Post Single Piec - ea. add'l 6 ins	0.25
40038	Str. & weld (GW) Corner Post Single Pie - First 6 ins	0.20
40039	Str. & weld (GW) Corner Post Single Pie - ea. add'l 6 ins	0.15
40040	Weld (WD) Corner Post Single Piece - First 6 ins	0.15
40041	Weld (WD) Corner Post Single Piece - ea. add'l 6 ins	0.10

40042	Replace (RP) Complete Front Corner Post Assy - ea. 8 ft 6 in	5.00
40043	Replace (RP) Complete Front Corner Post Assy - ea. 9 ft 6 in	5.00
40044	Replace (RP) Complete Rear Corner Post Assy - Each 8 ft	7.00
40045	Replace (RP) Complete Rear Corner Post Assy - Each 9 ft	7.50
40046	Insert (IT) X-member Assy (Partial profile) - First 12 ins	0.50
40047	Insert (IT) X-member Assy (Partial profile) - ea. add'l 6 ins	0.10
40048	Straighten (GS) X-member Assy - First	0.50
40049	Straighten (GS) X-member Assy - ea.add'l	0.50
40050	Str. & weld (GW) X-member Assy - First 6 ins	0.20
40051	Str. & weld (GW) X-member Assy - ea. add'l 6 ins	0.20
40052	Weld (WD) X-member Assy - First 6 ins	0.15
40053	Weld (WD) X-member Assy - ea. add'l 6 ins	0.10
40054	Replace (RP) Outriggers - First	1.00
40055	Replace (RP) Outriggers - ea. add'l	0.80
40056	Insert (IT) Outriggers full length - up to 2 - First	1.25
40057	Insert (IT) Outriggers full length - up to 2 - ea.add'l	1.00
40058	Insert (IT) Outriggers - First 12 ins	0.50
40059	Insert (IT) Outriggers - ea. add'l 6 ins	0.10
40060	Straighten (GS) Outriggers - First	0.50
40061	Straighten (GS) Outriggers - ea.add'l	0.50
40062	Str. & weld (GW) Outriggers - First 6 ins	0.20
40063	Str. & weld (GW) Outriggers - ea. add'l 6 ins	0.20
40064	Weld (WD Outriggers - First 6 ins	0.15
40065	Weld (WD Outriggers - ea. add'l 6 ins	0.10
40066	Straighten (GS) X-member Lower Flange - Each	0.25
40067	Str. & weld (GW) X-member Lower Flange - First 6 ins	0.50
40068	Str. & weld (GW) X-member Lower Flange - ea. add'l 6 ins	0.15
40069	Weld (WD) X-member Lower Flange - First 6 ins	0.25
40070	Weld (WD) X-member Lower Flange - ea. add'l 6 ins	0.15
40071	Straighten (GS) X-member(Outriggers) Lower Fl - Each	0.25
40072	Str. & weld (GW) X-member(Outriggers) Lower F - First 6 ins	0.20
40073	Str. & weld (GW) X-member(Outriggers) Lower F - ea. add'l 6 ins	0.15
40074	Weld (WD) X-member(Outriggers) Lower Flange - First 6 ins	0.15
40075	Weld (WD) X-member(Outriggers) Lower Flange - ea. add'l 6 ins	0.10
40076	Replace (RP) Complete X-member Assy - First	1.50
40077	Replace (RP) Complete X-member Assy - ea. add'l	1.25
40078	Insert (IT) X-member Assy full length - up t - First	2.50
40079	Insert (IT) X-member Assy full length - up t - ea.add'l	2.00
40080	Replace (RP) Door Gasket Assy - Each one door	2.50
40081	Section (SN) Door Gasket Assy	0.50
40082	Section (SN) Door Gasket Assy - ea. add'l	0.10
40083	Resecure (RE) Door Gasket Assy (corner) - Each	0.25
40084	Replace (RP) Gasket Retainer Strip - upto 24 - Each one door	1.20

40085	Section (SN) Gasket Retainer Strip - Each per piece	0.50
40086	Str. & resecure(fasten) (RS) Gasket Retainer - Each per piece	0.25
40087	Replace (RP) Comple Hinge Assy - Each	1.50
40088	Free up (FR) Hinge Assy - Each set of 4 Hinges pe	0.50
40089	Replace (RP) Hinge Blade - Each	0.60
40090	Straighten (GS) Hinge Blade - Each	0.25
40091	Replace (RP) Hinge pin only - Each	0.20
40092	Replace (RP) Locking Bar Assy - Each	1.50
40093	Replace (RP) Locking Bar Bracket - Each	0.20
40094	Straighten (GS) Locking Bar Bracket - Each	0.10
40095	Resecure (RE) Locking Bar Bracket - Each	0.15
40096	Remove & reinstall (RR) Locking Bar Bracket - Each	0.15
40097	Replace (RP) Locking Bar Cam - Each	0.30
40098	Straighten (GS) Locking Bar Cam - Each	0.10
40099	Replace (RP) Locking Bar Guide - Each	0.20
40100	Straighten (GS) Locking Bar Guide - Each	0.10
40101	Resecure (RE) Locking Bar Guide - Each	0.15
40102	Remove & reinstall (RR) Locking Bar Guide - Each	0.15
40103	Replace (RP) Locking Bar Handle - Each	0.25
40104	Straighten (GS) Locking Bar Handle - Each	0.20
40105	Free up (FR) Locking Bar Handle - Each	0.15
40106	Replace (RP) Door Locking Bar Lug - Each	0.15
40107	Straighten (GS) Door Locking Bar Lug - Each	0.20
40108	Str. & weld (GW) Door Locking Bar Lug - Each	0.20
40109	Weld (WD) Door Locking Bar Lug - Each	0.15
40110	Replace (RP) Locking Bar Rod / Tube - Each	1.00
40111	Section (SN) Locking Bar Rod / Tube - Each	0.30
40112	Straighten (GS) Locking Bar Rod / Tube - Each	0.20
40113	Free up (FR) Locking Bar Rod / Tube - Each	0.25
40114	Replace (RP) Door Handle Lock Assy - Each complete set	0.50
40115	Remove and refit (RR) Door Handle Lock Assy - Each complete set	0.15
40116	Straighten (GS) Door Handle Lock Assy - Each complete set	0.15
40117	Free up (FR) Door Handle Lock Assy - Each	0.25
40118	Replace (RP) Door Handle Catch - Each	0.10
40119	Straighten (GS) Door Handle Catch - Each	0.10
40120	Replace (RP) Door Handle Retainer - Each	0.10
40121	Straighten (GS) Door Handle Retainer - Each	0.10
40122	Replace (RP) Locking (Hinge) Bolt - Each	0.10
40123	Replace (RP) Locking (Bar Bracket) Bolt - Each	0.10
40124	Replace (RP) Locking (Bar Handle or Retainer) - First	0.15
40125	Replace (RP) Locking (Bar Handle or Retainer) - ea add'l	0.10
40126	Replace (RP) Locking (Gasket Retainer) Rivet - First 10 pieces	0.20
40127	Replace (RP) Locking (Gasket Retainer) Rivet - ea. add'l 10 pieces	0.50

40128	Grind (Sand) clean (SD) - Wood Floor Assy (E - 20 ft unit	2.00
40129	Grind (Sand) clean (SD) - Wood Floor Assy (E - 40 ft unit	4.00
40130	Grind (Sand) clean (SD) - Wood Floor Assy (E - Over 40 ft unit	4.00
40131	Grind (Sand) clean (SD) - Wood Floor Assy (S - First 10000 sq.cm	0.25
40132	Grind (Sand) clean (SD) - Wood Floor Assy (S - ea. Add'l 10000 sq.cm	0.25
40133	Steam clean (SC) - Wood Floor Assy (Entire) - 20 ft unit	2.00
40134	Steam clean (SC) - Wood Floor Assy (Entire) - 40 ft unit	3.00
40135	Steam clean (SC) - Wood Floor Assy (Entire) - Over 40 ft unit	3.00
40136	Steam clean (SC) - Wood Floor Assy (Spot) - First 10000 sq.cm	0.15
40137	Steam clean (SC) - Wood Floor Assy (Spot) - ea. Add'l 10000 sq.cm	0.15
40138	Chemical clean (CC) - Wood Floor Assy (Entir - 20 ft unit	2.00
40139	Chemical clean (CC) - Wood Floor Assy (Entir - 40 ft unit	3.00
40140	Chemical clean (CC) - Wood Floor Assy (Entir - Over 40 ft unit	3.00
40141	Chemical clean (CC) - Wood Floor Assy (Spot) - First 10000 sq.cm	0.25
40142	Chemical clean (CC) - Wood Floor Assy (Spot) - ea. Add'l 10000 sq.cm	0.15
40143	Water wash (WW) - Wood Floor Assy (Entire) - 20 ft unit	1.00
40144	Water wash (WW) - Wood Floor Assy (Entire) - 40 ft unit	2.00
40145	Water wash (WW) - Wood Floor Assy (Entire) - Over 40 ft unit	2.00
40146	Remove nails / fill holes (DF) - Wood Floor A - Each 10 pieces	0.15
40147	Replace (RP) - Complete Plain Plank floor - 20 ft unit	12.00
40148	Replace (RP) - Complete Plain Plank floor - 40 ft unit	24.00
40149	Replace (RP) - Complete Plain Plank floor - Over 40 ft unit	25.00
40150	Section (SN) - Plain Plank floor (Min.) - First 24 ins X 6 ins	0.90
40151	Section (SN) - Plain Plank floor (Min.) - ea. add'l 12 ins X 6 in	0.15
40152	Replace (RP) Complete Hat Section (Center Rai - 20 ft unit	2.00
40153	Replace (RP) Complete Hat Section (Center Rai - 40 ft (unit	2.50
40154	Replace (RP) Complete Hat Section (Center Rai - Over 40 ftunit	3.00
40155	Section (SN) Hat Section (Center Rail) - First 6 ins	0.50
40156	Section (SN) Hat Section (Center Rail) - ea. add'l 6 ins	0.15
40157	Replace (RP) - Complete Laminated hardwood P - 20 ft unit	12.00
40158	Replace (RP) - Complete Laminated hardwood P - 40 ft unit	24.00
40159	Replace (RP) - Complete Laminated hardwood P - Over 40 ft unit	25.00
40160	Section (SN) - Laminated hardwood Plank(Min.) - First 24 ins X 12 ins	0.75
40161	Section (SN) - Laminated hardwood Plank(Min.) - ea. add'l 12 ins X 12	0.15
40162	Replace (RP) - Complete Plywood Panel - 20 ft unit	12.00
40163	Replace (RP) - Complete Plywood Panel - 40 ft unit	24.00
40164	Replace (RP) - Complete Plywood Panel - Over 40 ft unit	25.00
40165	Replace (RP) - Plywood Panel - First 4ft x 8ft	6.50
40166	Replace (RP) - Plywood Panel - ea. Add'l 4ft x 8ft	5.00
40167	Section (SN) - Plywood Panel (Min.) - First 2 ft x 4 ft	1.25
40168	Section (SN) - Plywood Panel (Min.) - ea. add'l 1 ft x 4 ft	0.50
40169	Replace (RP) Treshold Plate - 12 ins X 96 ins	0.50
40170	Resecure (RE) Treshold Plate	0.15

40171	Patch (PT) Treshold Plate - up to 225 sq. cm	0.50
40172	Patch (PT) Treshold Plate - over 225 sq. cm F	0.75
40173	Patch (PT) Treshold Plate	0.25
40174	Straighten (GS) Treshold Plate	0.50
40175	Str. & resecure (RS) Treshold Plate	0.50
40176	Str. & weld (WD) Treshold Plate - First 6 ins	0.20
40177	Str. & weld (WD) Treshold Plate - ea. add'l 6 ins	0.15
40178	Replace (RP) Forklift Pockets Assy	4.50
40179	Straighten (GS) Fork Lift Pocket Side Lower F - Each	0.10
40180	Replace (RP) Fork Lift Pocket Straps - Each	0.40
40181	Straighten (GS) Fork Lift Pocket Straps - Each	0.10
40182	Str. & weld (GW) Fork Lift Pocket Straps - Each	0.20
40183	Weld (WD) Fork Lift Pocket Straps - Each	0.25
40184	Insert (IT) Forklift Pocket Side Whole Sectio - First - up to 8 ft	2.50
40185	Insert (IT) Forklift Pocket Side Whole Sectio - ea. add'l	2.00
40186	Insert (IT) Forklift Pockets Side Whole Secti - First 12 ins	0.60
40187	Insert (IT) Forklift Pockets Side Whole Secti - ea. add'l 6 ins	0.10
40188	Straighten (GS) Forklift Pockets Side Whole S - First	0.50
40189	Straighten (GS) Forklift Pockets Side Whole S - ea. add'l	0.50
40190	Str. & weld (GW) Forklift Pockets Side Whole - First 6 ins	0.50
40191	Str. & weld (GW) Forklift Pockets Side Whole - ea. add'l 6 ins	0.25
40192	Weld (WD) Forklift Pockets Side Whole Section - First 6 ins	0.15
40193	Weld (WD) Forklift Pockets Side Whole Section - ea. add'l 6 ins	0.10
40194	Patch (PT) Panel Assy - up to 225 sq. cm	0.50
40195	Patch (PT) Panel Assy - over 225 sq. cm F	1.00
40196	Patch (PT) Panel Assy	0.15
40197	Straighten (GS) Panel Assy - upto 3600 sq. cm	0.50
40198	Straighten (GS) Panel Assy	0.20
40199	Straighten (GS) Panel Assy - upto 10800 sq. cm	1.10
40200	Straighten (GS) Panel Assy	0.10
40201	Straighten (GS) Panel Assy - over 10800 sq. cm F	2.45
40202	Straighten (GS) Panel Assy	0.15
40203	Str. & weld (GW) Panel Assy - First 6 ins	0.20
40204	Str. & weld (GW) Panel Assy - ea. add'l 6 ins	0.15
40205	Weld (WD) Panel Assy - First 6 ins or Pin hole	0.15
40206	Weld (WD) Panel Assy - ea. add'l 6 ins or Pin	0.10
40207	Replace (RP) - Side Panel - 4 ft X 8 ft - First 1 sheet	5.00
40208	Replace (RP) - Side Panel - 4 ft X 8 ft - ea. add'l 1 sheet	4.50
40209	Replace (RP) - Side Panel - 4 ft X 9 ft - First 1 sheet	5.50
40210	Replace (RP) - Side Panel - 4 ft X 9 ft - ea. add'l 1 sheet	5.00
40211	Replace (RP) Complete Roof Panel Assy - 20 ft unit	15.00
40212	Replace (RP) Complete Roof Panel Assy - 40 ft unit	25.00
40213	Replace (RP) Complete Roof Panel Assy - Over 40 ft unit	27.00

40214	Replace (RP) Roof Panel Assy - First 1 sheet	4.50
40215	Replace (RP) Roof Panel Assy - ea. add'l 1 sheet	4.00
40216	Replace (RP) - Front Panel - 4 ft X 8 ft - First 1 sheet	5.00
40217	Replace (RP) - Front Panel - 4 ft X 8 ft - ea. add'l 1 sheet	4.50
40218	Replace (RP) - Front Panel - 4 ft X 9 ft - First 1 sheet	5.50
40219	Replace (RP) - Front Panel - 4 ft X 9 ft - ea. add'l 1 sheet	5.00
40220	Replace (RP) Door Complete(w/o hardware)	7.00
40221	Replace (RP) Door Panel - Each 9ft	8.50
40222	Patch(PT) Door Panel Upper or Lower Edge - Each (120cms X 20cms)	2.00
40223	Replace (RP) Complete Flat Roof Panel - 20 ft unit	17.00
40224	Replace (RP) Complete Flat Roof Panel - 40 ft unit	26.00
40225	Replace (RP) Complete Flat Roof Panel - Over 40 ft unit	26.00
40226	Replace (RP) Flat Roof Panel - First 1 sheet	6.00
40227	Replace (RP) Flat Roof Panel - ea. add'l 1 sheet	5.00
40228	Patch (PT) Flat Roof Panel - up to 225 sq. cm	0.75
40229	Patch (PT) Flat Roof Panel - over 225 sq. cm F	1.00
40230	Patch (PT) Panel - behind hinge	1.00
40231	Straighten (GS) Flat Roof Panel - upto 3600 sq. cm	0.50
40232	Straighten (GS) Flat Roof Panel	0.25
40233	Straighten (GS) Flat Roof Panel - upto 10800 sq. cm	1.25
40234	Straighten (GS) Flat Roof Panel	0.15
40235	Straighten (GS) Flat Roof Panel - over 10800 sq. cm	2.45
40236	Straighten (GS) Flat Roof Panel	0.15
40237	Str. & weld (GW) Flat Roof Panel - First 6 ins	0.50
40238	Str. & weld (GW) Flat Roof Panel - ea. add'l 6 ins	0.25
40239	Weld (WD) Flat Roof Panel - First 6 ins or Pin hole	0.50
40240	Weld (WD) Flat Roof Panel - ea. add'l 6 ins or Pin	0.25
40241	Insert (IT) Side Bottom Rail Assy - First 12 ins	0.70
40242	Insert (IT) Side Bottom Rail Assy - ea. add'l 6 ins	0.10
40243	Section (SN) Side Bottom Rail Assy - First 12 ins	1.40
40244	Section (SN) Side Bottom Rail Assy - ea. add'l 6 ins	0.50
40245	Str. & weld(GW) Side Bottom Rail Assy - First 6 ins	0.20
40246	Str. & weld(GW) Side Bottom Rail Assy - ea. add'l 6 ins	0.15
40247	Straighten (GS) Side Bottom Rail Assy - First 12 ins	0.30
40248	Straighten (GS) Side Bottom Rail Assy - ea. add'l 6 ins	0.10
40249	Weld (WD) Side Bottom Rail Assy - First 6 ins	0.15
40250	Weld (WD) Side Bottom Rail Assy - ea. add'l 6 ins	0.10
40251	Insert (IT) Front Sill Assy - First 12 ins	0.70
40252	Insert (IT) Front Sill Assy - ea. add'l 6 ins	0.10
40253	Section (SN) Front Sill Assy - First 12 ins	2.00
40254	Section (SN) Front Sill Assy - ea. add'l 6 ins	0.75
40255	Str. & weld(GW) Front Sill Assy - First 6 ins	0.75
40256	Str. & weld(GW) Front Sill Assy - ea. add'l 6 ins	0.25

40257	Straighten (GS) Front Sill Assy - First 12 ins	0.50
40258	Straighten (GS) Front Sill Assy - ea. add'l 6 ins	0.25
40259	Weld (WD) Front Sill Assy - First 6 ins	0.15
40260	Weld (WD) Front Sill Assy - ea. add'l 6 ins	0.10
40261	Insert (IT) Door Sill Assy - First 12 ins	0.70
40262	Insert (IT) Door Sill Assy - ea. add'l 6 ins	0.10
40263	Section (SN) Door Sill Assy - First 12 ins	1.40
40264	Section (SN) Door Sill Assy - ea. add'l 6 ins	0.50
40265	Str. & weld(GW) Door Sill Assy - First 6 ins	0.75
40266	Str. & weld(GW) Door Sill Assy - ea. add'l 6 ins	0.25
40267	Straighten (GS) Door Sill Assy - First 12 ins	0.50
40268	Straighten (GS) Door Sill Assy - ea. add'l 6 ins	0.25
40269	Weld (WD) Door Sill Assy - First 6 ins	0.15
40270	Weld (WD) Door Sill Assy - ea. add'l 6 ins	0.10
40271	Insert (IT) Side Top Rail Assy - First 12 ins	0.70
40272	Insert (IT) Side Top Rail Assy - ea. add'l 6 ins	0.10
40273	Section (SN) Side Top Rail Assy - First 12 ins	1.10
40274	Section (SN) Side Top Rail Assy - ea. add'l 6 ins	0.50
40275	Str. & weld(GW) Side Top Rail Assy - First 6 ins	0.20
40276	Str. & weld(GW) Side Top Rail Assy - ea. add'l 6 ins	0.15
40277	Straighten (GS) Side Top Rail Assy - First 12 ins	0.30
40278	Straighten (GS) Side Top Rail Assy - ea. add'l 6 ins	0.10
40279	Weld (WD) Side Top Rail Assy - First 6 ins	0.15
40280	REMOVE FROZEN LOCKING CONE	0.50
40281	Weld (WD) Side Top Rail Assy - ea. add'l 6 ins	0.10
40282	Insert (IT) Door(Rear) Header Assy - First 12 ins	0.70
40283	Insert (IT) Door(Rear) Header Assy - ea. add'l 6 ins	0.10
40284	Section (SN) Door(Rear) Header Assy - First 12 ins	1.10
40285	Section (SN) Door(Rear) Header Assy - ea. add'l 6 ins	0.50
40286	Str. & weld(GW) Door(Rear) Header Assy - First 6 ins	0.75
40287	Str. & weld(GW) Door(Rear) Header Assy - ea. add'l 6 ins	0.25
40288	Straighten (GS) Door(Rear) Header Assy - First 12 ins	0.50
40289	Straighten (GS) Door(Rear) Header Assy - ea. add'l 6 ins	0.25
40290	Weld (WD) Door(Rear) Header Assy - First 6 ins	0.15
40291	Weld (WD) Door(Rear) Header Assy - ea. add'l 6 ins	0.10
40292	Insert (IT) Front Top Rail Assy - First 12 ins	0.70
40293	Insert (IT) Front Top Rail Assy - ea. add'l 6 ins	0.10
40294	Section (SN) Front Top Rail Assy - First 12 ins	1.10
40295	Section (SN) Front Top Rail Assy - ea. add'l 6 ins	0.50
40296	Str. & weld(GW) Front Top Rail Assy - First 6 ins	0.20
40297	Str. & weld(GW) Front Top Rail Assy - ea. add'l 6 ins	0.15
40298	Straighten (GS) Front Top Rail Assy - First 12 ins	0.30
40299	Straighten (GS) Front Top Rail Assy - ea. add'l 6 ins	0.10

40300	Weld (WD) Front Top Rail Assy - First 6 ins	0.15
40301	Weld (WD) Front Top Rail Assy - ea. add'l 6 ins	0.10
40302	Replace (RP) Door Cam Keeper - Each	0.25
40303	Resecure (RE) Door Cam Keeper - Each	0.10
40304	Replace (RP) Rail Doubling Plate - Each	1.00
40305	Insert (IT) Rail Doubling Plate - Each	0.50
40306	Str. & weld (GW) Rail Doubling Plate - Each	0.20
40307	Weld (WD) Rail Doubling Plate - Each	0.15
40308	Replace (RP) Rear/Front Rail Cone Protector Recess - Each	0.70
40309	Replace (RP) Front Rail Cone Protector Rece - 20 ft unit	2.00
40310	Replace (RP) Front Rail Cone Protector Rece - 40 ft unit	2.50
40311	Replace (RP) Front Rail Cone Protector Rece - Over 40 ft unit	2.50
40312	Straighten (GS) Side Bottom Rail Lower Flang - ea. add'l 6 ins	0.10
40312	Straighten (GS) Side Bottom Rail Lower Flang - First 12 ins	0.10
40313	Str. & weld(GW) Side Bottom Rail Lower Flange - First 6 ins	0.20
40314	Str. & weld(GW) Side Bottom Rail Lower Flange - ea. add'l 6 ins	0.15
40315	Weld (WD) Side Bottom Rail Lower Flange - First 6 ins	0.15
40316	Weld (WD) Side Bottom Rail Lower Flange - ea. add'l 6 ins	0.10
40317	Straighten (GS) Front Bottom Rail Lower Fla - First 12 ins	0.10
40318	Straighten (GS) Front Bottom Rail Lower Fla - ea. add'l 6 ins	0.10
40319	Str. & weld (GW) Front Bottom Rail Lower Fla - First 6 ins	0.20
40320	Str. & weld (GW) Front Bottom Rail Lower Fla - ea. add'l 6 ins	0.15
40321	Weld (WD) Front Bottom Rail Lower Flange - First 6 ins	0.15
40322	Weld (WD) Front Bottom Rail Lower Flange - ea. add'l 6 ins	0.10
40323	Straighten (GS) Door (Rear) Bottom Rail Lower - First 12 ins	0.10
40324	Straighten (GS) Door (Rear) Bottom Rail Lower - ea. add'l 6 ins	0.10
40325	Str. & weld (GW) Door (Rear) Bottom Rail Lowe - First 6 ins	0.20
40326	Str. & weld (GW) Door (Rear) Bottom Rail Lowe - ea. add'l 6 ins	0.10
40327	Weld (WD) Door (Rear) Bottom Rail Lower Flang - First 6 ins	0.15
40328	Weld (WD) Door (Rear) Bottom Rail Lower Flang - ea. add'l 6 ins	0.10
40329	Str. & weld(GW) Side Bottom Rail Upper Flange - First 6 ins	0.20
40330	Str. & weld(GW) Side Bottom Rail Upper Flange - ea. add'l 6 ins	0.10
40331	Weld (WD) Side Bottom Rail Upper Flange - First 6 ins	0.15
40332	Weld (WD) Side Bottom Rail Upper Flange - ea. add'l 6 ins	0.10
40333	Str. & weld (GW) Front Bottom Rail Upper Fla - First 6 ins	0.20
40334	Str. & weld (GW) Front Bottom Rail Upper Fla - ea. add'l 6 ins	0.10
40335	Weld (WD) Front Bottom Rail Upper Flange - First 6 ins	0.15
40336	Weld (WD) Front Bottom Rail Upper Flange - ea. add'l 6 ins	0.10
40337	Str. & weld (GW) Door (Rear) Bottom Rail Uppe - First 6 ins	0.20
40338	Str. & weld (GW) Door (Rear) Bottom Rail Uppe - ea. add'l 6 ins	0.10
40339	Weld (WD) Door (Rear) Bottom Rail Upper Flang - First 6 ins	0.15
40340	Weld (WD) Door (Rear) Bottom Rail Upper Flang - ea. add'l 6 ins	0.10
40341	Replace (RP) Side Bottom Rail Gussets - Each	0.40

40342	Str. & weld(GW) Side Bottom Rail Gussets - Each	0.20
40343	Weld (WD) Side Bottom Rail Gussets - Each	0.15
40344	Replace (RP) Rear Bottom Rail (Door Sill) Gus - Each	0.40
40345	Str. & weld (GW) Rear Bottom Rail (Door Sill) - Each	0.20
40346	Weld (WD) Rear Bottom Rail (Door Sill) Gusset - Each	0.15
40347	Replace (RP) Front Bottom Rail Gussets - Each	0.40
40348	Str. & weld (GW) Front Bottom Rail Gussets - Each	0.20
40349	Weld (WD) Front Bottom Rail Gussets - Each	0.15
40350	Replace (RP) Side Top Rail Gussets - Each	0.40
40351	Str. & weld (GW) Side Top Rail Gussets - Each	0.20
40352	Weld (WD) Side Top Rail Gussets - Each	0.15
40353	Replace (RP) Rear Top Rail (Headers) Gussets - Each	0.40
40354	Str. & weld (GW) Rear Top Rail (Headers) Guss - Each	0.20
40355	Weld (WD) Rear Top Rail (Headers) Gussets - Each	0.15
40356	Replace (RP) Front Top Rail Gussets - Each	0.40
40357	Str. & weld (GW) Front Top Rail Gussets - Each	0.20
40358	Weld (WD) Front Top Rail Gussets - Each	0.15
40359	Replace (RP) Gooseneck Tunnel Rail - Each	5.00
40360	Insert (IT) Gooseneck Tunnel Rail full length - Each - up to 10 ft	5.00
40361	Insert (IT) Gooseneck Tunnel Rail - First 12 ins	0.75
40362	Insert (IT) Gooseneck Tunnel Rail - ea. add'l 6 ins	0.15
40363	Section (SN) Gooseneck Tunnel Rail - First 12 ins	0.80
40364	Section (SN) Gooseneck Tunnel Rail - ea. add'l 6 ins	0.25
40365	Str. & weld (GW) Gooseneck Tunnel Rail - First 6 ins	0.20
40366	Str. & weld (GW) Gooseneck Tunnel Rail - ea. add'l 6 ins	0.15
40367	Weld (WD) Gooseneck Tunnel Rail - First 6 ins	0.15
40368	Weld (WD) Gooseneck Tunnel Rail - ea. add'l 6 ins	0.10
40369	Remove (MV) Rain Gutter	2.00
40370	Straighten (GS) Rain Gutter	0.10
40371	Str. & weld (GW) Rain Gutter	0.50
40372	Weld (WD) Rain Gutter	0.50
40373	Replace (RP) Complete Side Bottom Rail Assy - 20 ft	10.00
40374	Replace (RP) Complete Side Bottom Rail Assy - 40 ft	15.00
40375	Replace (RP) Complete Side Bottom Rail Assy - Over 40 ft	17.00
40376	Insert (IT) Side Bottom Rail Assy Full length - 20 ft	12.00
40377	Insert (IT) Side Bottom Rail Assy Full length - 40 ft	20.00
40378	Insert (IT) Side Bottom Rail Assy Full length - Over 40 ft	20.00
40379	Replace (RP) complete Front Sill Assy	4.50
40380	Insert (IT) Front Sill Assy full length	3.50
40381	Replace (RP) complete Door Sill Assy with exi - 8 ft	4.00
40382	Insert (IT) Door Sill Assy full length - 8 ft	4.50
40383	Replace (RP) Complete Side Top Rail Assy with - 20 ft	10.00
40384	Replace (RP) Complete Side Top Rail Assy with - 40 ft	15.00

40385	Replace (RP) Complete Side Top Rail Assy with - Over 40 ft	17.00
40386	Insert (IT) Side Top Rail Assy full length - 20 ft	10.00
40387	Insert (IT) Side Top Rail Assy full length - 40 ft	19.00
40388	Insert (IT) Side Top Rail Assy full length - Over 40 ft	19.00
40389	Replace (RP) complete Door(Rear) Hear Assy	4.00
40390	Insert (IT) Door(Rear) Hear Assy full length	6.00
40391	Replace (RP) Complete Front Top Rail Assy wit	4.50
40392	Insert (IT) Front Top Rail Assy full length -	4.00
40393	Replace (RP) Door stiffener(Frame)-bottom edg - 4 ft	2.50
40394	Insert (IT) - Door stiffener(Frame)-bottom ed - 4 ft	2.00
40395	Replace (RP) Door stiffener(Frame)-centre lin - 8 ft	3.00
40396	Replace (RP) Door stiffener(Frame)-centre lin - 9 ft	3.50
40397	Insert (IT) - Door stiffener(Frame)-centre li - 8 ft	4.00
40398	Insert (IT) - Door stiffener(Frame)-centre li - 9 ft	4.50
40399	Replace (RP) Door stiffener(Frame)-hinge side - 8 ft	5.00
40400	Replace (RP) Door stiffener(Frame)-hinge side - 9 ft	5.50
40401	Insert (IT) - Door stiffener(Frame)-hinge sid - 8 ft	4.00
40402	Insert (IT) - Door stiffener(Frame)-hinge sid - 9 ft	4.50
40403	Replace (RP) Door stiffener(Frame)-Top edge - 4 ft	2.00
40404	Insert (IT) Door stiffener(Frame)-Top edge - 4 ft	2.00
40405	Insert (IT) Door stiffener(Frame) - First 12 ins	0.90
40406	Insert (IT) Door stiffener(Frame) - ea. add'l 12 ins	0.50
40407	Section (SN)Door stiffener(Frame) - First 12 ins	1.30
40408	Section (SN)Door stiffener(Frame) - ea. add'l 12 ins	0.30
40409	Straighten (GS) Door stiffener(Frame) - First 12 ins	0.50
40410	Straighten (GS) Door stiffener(Frame) - ea. add'l 12 ins	0.15
40411	Str. & weld (GW) Door stiffener(Frame) - First 6 ins	0.20
40412	Str. & weld (GW) Door stiffener(Frame) - ea. add'l 6 ins	0.15
40413	Weld (WD) Door stiffener(Frame) - First 6 ins	0.15
40414	Weld (WD) Door stiffener(Frame) - ea. add'l 6 ins	0.10
40415	Replace (RP) Header Extension Plates	3.00
40416	Patch (PT) Header Extension Plates - up to 225 sq. cm	0.50
40417	Patch (PT) Header Extension Plates - over 225 sq. cm F	1.00
40418	Patch (PT) Header Extension Plates	0.15
40419	Replace (RP) Complete Gooseneck Tunnel Assy	8.70
40420	Replace (RP) Gooseneck Tunnel Top Plate	8.00
40421	Insert (IT) Gooseneck Tunnel Top Plate - up to 225 sq.cm	0.75
40422	Insert (IT) Gooseneck Tunnel Top Plate - over 225 sq.cm	1.00
40423	Insert (IT) Gooseneck Tunnel Top Plate	0.15
40424	Straighten (GS) Gooseneck Tunnel Top Plate	0.50
40425	Str. & weld (GW) Gooseneck Tunnel Top Plate - First 6 ins	0.20
40426	Str. & weld (GW) Gooseneck Tunnel Top Plate - ea. add'l 6 ins	0.15
40427	Weld (WD) Gooseneck Tunnel Top Plate - First 6 ins	0.15

40428	Weld (WD) Gooseneck Tunnel Top Plate - ea. add'l 6 ins	0.10
40429	Replace (RP) Gooseneck Tunnel Bolster	4.00
40430	Insert (IT) Gooseneck Tunnel Bolster full len	4.00
40431	Insert (IT) (Partial Profile) Gooseneck Tunne - First 12 ins	0.75
40432	Insert (IT) (Partial Profile) Gooseneck Tunne - ea. add'l 6 ins	0.25
40433	Straighten (GS) Gooseneck Tunnel Bolster - First 6 ins	0.25
40434	Straighten (GS) Gooseneck Tunnel Bolster - ea. add'l 6 ins	0.15
40435	Str. & weld (GW) Gooseneck Tunnel Bolster - First 6 ins	0.20
40436	Str. & weld (GW) Gooseneck Tunnel Bolster - ea. add'l 6 ins	0.15
40437	Weld (WD) Gooseneck Tunnel Bolster - First 6 ins	0.15
40438	Weld (WD) Gooseneck Tunnel Bolster - ea. add'l 6 ins	0.10
40439	Replace (RP) Ventilator (PVC) - ea. large size	0.25
40440	Replace (RP) Ventilator (PVC) - ea. small size	0.25
40441	Remove & reinstall (RR) Ventilator - Each	0.25
40442	Patch (PT) - Steel Ventilator Cover - ea. large size	1.00
40443	Patch (PT) - Steel Ventilator Cover - ea. small size	0.30
40444	Replace (RP) Tie rope - Each	0.25
40445	Dismantle (RM) lashing, When removing a hange - Each unit	1.50
40446	Dismantle (RM) hanger - 20 ft	3.50
40447	Dismantle (RM) hanger - 40 ft	6.00
40448	Dismantle (RM) hanger - Over 40 ft	6.00
40449	Replace (RP) Tie hook - Each	0.25
40450	Str. & weld (GW) Tie hook - Each	0.25
40451	Resecure (RE) Floor Screws - First 10 pieces	0.15
40452	Resecure (RE) Floor Screws - ea. add'l 10 pieces	0.15
40453	Sweeping (WP) - Cargo Container - Each unit	0.50
40454	Chemical clean (CC) Cargo Container - 20 ft	1.00
40455	Chemical clean (CC) Cargo Container - 40 ft	1.50
40456	Chemical clean (CC) Cargo Container - Over 40 ft	1.50
40457	Steam clean (SC) Cargo Container - 20 ft	1.00
40458	Steam clean (SC) Cargo Container - 40 ft	1.50
40459	Steam clean (SC) Cargo Container - Over 40 ft	1.50
40460	Water wash (WW) Cargo Container - 20 ft	0.65
40461	Water wash (WW) Cargo Container - 40 ft	1.00
40462	Water wash (WW) Cargo Container - Over 40 ft	1.00
40463	Chemical clean (CC) Cargo Container - 20 ft	2.00
40464	Chemical clean (CC) Cargo Container - 40 ft	3.00
40465	Chemical clean (CC) Cargo Container - Over 40 ft	3.00
40466	Steam clean (SC) Cargo Container - 20 ft	2.00
40467	Steam clean (SC) Cargo Container - 40 ft	3.00
40468	Steam clean (SC) Cargo Container - Over 40 ft	3.00
40469	Water wash (WW) Cargo Container	1.00
40470	Water wash (WW) Cargo Container - 40 ft	2.00

40471	Water wash (WW) Cargo Container - Over 40 ft	2.00
40472	Sealant caulking (SE) Cargo Container - First 40 ins	0.08
40473	Sealant caulking (SE) Cargo Container - ea. Add'l 40 ins	0.05
40474	Paint (PA) - Cargo Container Top coat only - Each 10000 sq.cm	0.15
40475	Paint (PA) - Cargo Container Top coat only - Each 10000 sq.cm	0.15
40479	Abrasive clean & paint (AB) Cargo container - Exterior	0.50
40480	Abrasive clean & paint (AB) Cargo container - Interior	0.50
40481	Remove (GT) any type of graffiti, glue - up to 225 sq. cm	0.15
40482	Remove (GT) any type of graffiti, glue - over 225 sq. cm F	0.25
40483	Remove (GT) any type of graffiti, glue - ea. Add'l	0.10
40484	Full Refurbishing (PR) for Old container - 20 ft	55.00
40485	Full Refurbishing (PR) for Old container - 40 ft	92.00
40487	Refurbishing (PR) for Side Wall - Complete - 20 ft	19.93
40488	Refurbishing (PR) for Side Wall - Complete - 40 ft	34.06
40489	Refurbishing (PR) for Side Wall - Complete - Over 40 ft	34.06
40490	Refurbishing (PR) for Side Wall - Complete - 20 ft	19.93
40491	Refurbishing (PR) for Side Wall - Complete - 40 ft	34.06
40492	Refurbishing (PR) for Side Wall - Complete - Over 40 ft	34.06
40493	Refurbishing (PR) for Old container - 20 ft	14.56
40494	Refurbishing (PR) for Old container - 40 ft	14.56
40495	Refurbishing (PR) for Old container - Over 40 ft	14.56
40496	Replace (RP) complete Flat Roof Panel Assy - 20 ft	20.00
40497	Replace (RP) complete Flat Roof Panel Assy - 40 ft	35.00
40498	Replace (RP) complete Flat Roof Panel Assy - Over 40 ft	35.00
40499	Refurbishing (PR) for Roof Complete - 20 ft	12.00
40500	Refurbishing (PR) for Roof Complete - 40 ft	17.11
40501	Refurbishing (PR) for Roof Complete - Over 40 ft	17.11
40502	Refurbishing (PR) for Understructure Complete - 20 ft	27.33
40503	Refurbishing (PR) for Understructure Complete - 40 ft	46.83
40504	Refurbishing (PR) for Understructure Complete - Over 40 ft	46.83
40505	Remove Rear Door (Onino Box) - Each one door	1.50
40506	Reinstall Rear Door (Onino Box) - Each one door	4.00
40507	Replace (RP) Door Panel Assy - Each one door	8.50
40508	Refurbishing (PR) for Door Complete - 20 ft	14.56
40509	Refurbishing (PR) for Door Complete - 40 ft	14.56
40510	Refurbishing (PR) for Door Complete - Over 40 ft	14.56
40511	Replace (RP) - (Country code decal) - Each	0.10
40512	Replace (RP) - (Weight marking) - One only	0.15
40513	Replace (RP) - (Prefix) - Each	0.10
40514	Replace (RP) - (Fleet numbers Set of 7 charac - Each set	0.10
40515	Replace (RP) - (Fleet numbers Set of 6 charac - Each set	0.10
40516	Replace (RP) - (Fleet digit No.) - Each	0.10
40517	Replace (RP) - (Size and type decal) - Each	0.10

40518	Replace (RP) - (Cargo limit decal) - Each	0.15
40519	Replace (RP) - (Caution stripe decal) - Each	0.10
40520	Replace (RP) - (Consolidated Data plate) - One only	0.25
40521	Reseal (SR) by Rivet - (Consolidated Data pla - ea. 10pieces	0.25
40522	Replace (RP) - First character decal	0.10
40523	Replace (RP) - ea. add'l single chara	0.10
40524	Replace (RP) - (CSC plate) - one only	0.25
40525	Straighten and resecure (RS) - (CSC plate) - one only	0.10
40526	Replace (RP) - (UIC decal) - Each	0.10
40527	Replace (RP) - (TIR plate) - one only	0.10
40528	Replace (RP) - (Cargo Label plate) - one only	0.10
40529	Straighten and resecure (RS) - (Cargo Label p - one only	0.25
40530	Remove & refit (RR) - (Cargo Label plate) - one only	0.10
40531	Replace (RP) - (Timber chemical treatment) - one only	0.10
40532	Straighten and resecure (RS) - (Timber chemic - one only	0.10
40533	Remove Markings (MV) - Up to three (3) Labels	0.10
40534	Remove Markings (MV) - ea.add'l 3labels	0.25
40540	TUNNEL RAILS - STRAIGHTEN - BOTH SIDE	2.00
* Total Terminals International, LLC (TTI) will invoice hours multiplied by applicable Maintenance and Repair man hour rate as per the TTI Marine Terminal Operator Rate Schedule.		